

AI-based defect detection that exceeds the ability of expert inspectors





A better option for inspections requiring specialist knowledge and high sensitivity

Meeting sensory inspection needs amid a shortage of skilled inspectors


Skilled inspectors are hard to come by these days, and labor costs have risen sharply. Manufacturers are now facing intense pressure to automate processes that rely on the senses of experienced human workers. Particularly when it comes to visual inspection, it's important to reliably identify subtle defects even on flexible lines producing a wide range of items. Traditionally, the knowledge and sensitivity of technicians with long-term experience has been key. However, artificial intelligence is now reaching the stage where it can recognize object features as well as humans and automatically learn criteria. While a lot of Al solutions faces challenges with large amounts of image data, specialized hardware and engineering expertise, Omron is making great progress in enabling its widespread use.



Al reproduces human experience and sensibility

To solve these challenges, Omron developed new defect detection AI that reproduces the techniques of skilled inspectors. This AI is now part of the FH Vision System.



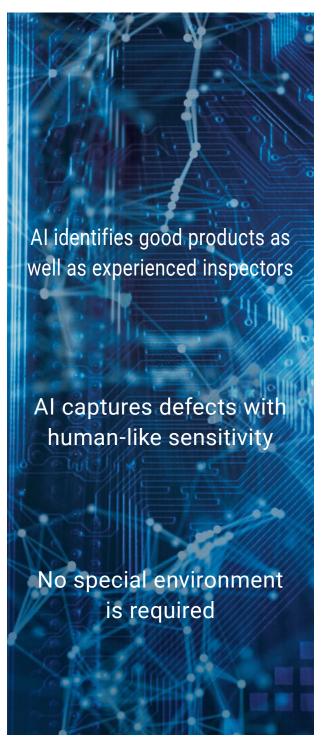

Al identifies good products as well as experienced inspectors


Sensory inspection requires a certain tolerance for variations that don't pass a certain threshold. Determining what variations are acceptable is a key capability of expert inspectors and poses a challenge for automated inspection systems.



The FH Series can determine acceptable variation tolerances.

Al Fine Matching

Omron's AI Fine Matching tool learns from the image data of non-defective products to quickly acquire the "expertise" that inspectors develop over the course of many years. This reduces costs and boosts productivity through automation.

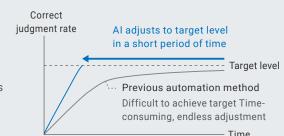

Judges as non-defective product

- Time Target inspection level: Reduce overdetection Difference image Al automation method Previous automation method Contamination inspection Detects position differences, not Detects foreign materials only foreign materials, as defects and ignores position differences of LED modules Captured image Defective product With foreign materials Overdetection Detects foreign material only Non-defective product Position difference of die Overdetection Judges as non-defective product Non-defective product Position difference and light variation of surrounding part

Overdetection


Al Fine Matching

Al reduces overdetection

Al Fine Matching identifies a future that is not included in good products as a defect.

Al learns images of good products with variations, and generates an AI model.

Every time an inspection is carried out, Al reconstructs a model that is presumed to be a good product. Al extracts a difference between the reconstructed good product image and a captured image to identify a defect, reducing overdetection.

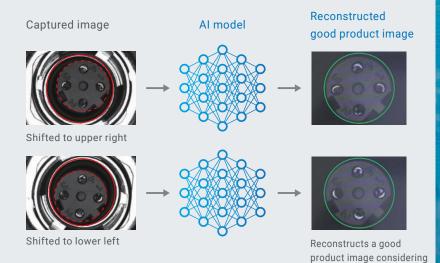

Al makes it easy to avoid overdetection PATENT PENDING

Three quick steps on the settings screen guide the user through the process of creating the good product model with the minimum number of images.

Prepare images

Although standard Al processing requires a huge number of images for learning, the FH Series requires only 100 to 200 images.

Good product image



Defective product image



2 Create model

The system suggests images to learn, helping to complete the good product model.

Al makes it easy



Al model

3 Check results

Test is automatically performed using images prepared in Step 1. You don't need to adjust parameters for differential inspections.

different views of holes

Al makes it easy



Correlation score Image A:10 Image B:150

When a good product is judged as defective, Al gives each image a correlation score to visualize the degree of overdetection. This facilitates selecting images that need to be learned to reduce overdetection.

^{*1. &}quot;Patent pending" means that we applied for a patent in Japan, and "Patented" means that we obtained a patent in Japan. (as of May 2022)

Al captures defects with human-like sensitivity

Defect detection tasks that rely on human sensibility are a challenge to automate. Fortunately, powerful new Al technology can match the skills and capabilities of experienced inspectors.



Automating human vision-based inspection with the FH Series

AI Scratch Detect Filter

The latest capabilities of the FH Vision System include a new Al-based image filter that reproduces the technique that skilled inspectors use to identify a defect on any product background. Scratches and blemishes that were once difficult to capture can now be identified even without the use of samples or adjustment.



Captured image



Previous detection image
Cannot separate a scratch from noise



Detection image
Can detect a scratch only



*1. The FH-UMAI1 Scratch Detect Al Software Installer is required to use Al Scratch Detect Filter.

Al Scratch Detect Filter

Al reproduces human expertise through learned criteria

The AI Scratch Defect Filter learns by means of images in which human inspectors noticed defects. Whereas previous inspection methods found the unexpected size, shape or color of a particular defect to be a barrier to automation, AI successfully extracts abnormalities by judging their features without definition. The learned data facilitates defect detection on processed surfaces and other uneven backgrounds that previously posed an insurmountable challenge.

Captured image



Extracted scratch (internal image)



Solutions using Al



Al identifies good products as well as experienced inspectors

- Uneven colors and dimensional variations within tolerance
- · Difficult to identify defects due to complex shapes
- Time-consuming inspection area setting and parameter adjustment for different shapes of many objects

Al Fine Matching

- · Reliable detection by learning variations in colors and dimensions of good products
- · Identification of defects in complex-shaped parts
- · Quick setting for many objects with different shapes by simply enclosing inspection areas

Print inspection for product labels

Variations in darkness, thickness, and positions of printed characters are acceptable, and only defects such as chipped characters are detected. The inspection area is set to the entire label.









Chipped character

Ink splatter

Chip and contamination inspection for electronic parts

Minor dimensional differences are permitted, and only defects are detected in complex-shaped parts. The inspection area is set to the entire part surface.











Chipped resin

Foreign material

Contamination and shape inspection for resin molded parts

Efficient learning of many objects with different shapes enables quick setting of conditions for extracting only defects from complex shapes. The inspection area is set according to the shape of the molded part.











Shape A: foreign material

Shape B: foreign material and deformation

Al captures defects with human-like sensitivity

Issue

- · Filters and parameters are combined and adjusted to detect low-contrast defects.
- · Low-contrast defects cannot be detected.

Al Scratch Detect Filter

· Regardless of material type, color, or size, defects can be extracted reliably without previously required definition and adjustment.





Scratch on sandblasted metal



Black scratch on hairline finish



Scratch on resin products





White scratch on shaded hairline finish

No special environment is required

With the FH Series, there's no need for high-end hardware or specialized engineers who can configure the system to suit your needs. Our general-purpose vision system makes it easier than ever to introduce AI into production sites.

Vision controller with AI functionality

Artificial intelligence has traditionally required a high-end environment, but our lightweight creative solution comes in the form of user-friendly processing items that have been integrated into our popular FH Series hardware.

No special hardware for AI required

It used to be difficult to introduce AI technology to many inspection processes because of its hardware requirements. The FH Series does not require special hardware, facilitating the introduction of this technology. The FH Series does not require special hardware, facilitating introduction.

No AI engineer required

In order to reliably use AI technology in processes, the engineer used to have not only image processing skills but also programming and maintenance skills. With the FH Series, however, you can use AI technology just like operating a standard vision sensor. No dedicated AI engineer is required.



Intel® Core™ i7 processor



Machine control network
 Cycle: 125 μs



2 Data output High-speed interface: USB 3.0

^{*1.} The FH-5551 Controller is compared with the FH-3050 Controller.

High-resolution cameras





Ultra-high-speed sensing technology in a compact design


There was a trade-off between high-resolution image capture like the human eye and inspection processing speed. We use new CMOS image elements and dual transfer technology to capture high-resolution images while transferring images at high speeds. This facilitates applications that previously required multiple cameras or a mechanism to move a camera.

MDMC light with flexible lighting patterns


This light can be adjusted to defects by combining the illumination colors and angles like humans do. Even if new objects or inspection items are added after installation, there is no need to add or change the light—just change the illumination pattern. The illumination patterns can be registered as settings, facilitating duplicating production lines.

Illumination structure


You can choose the best pattern by combining illumination directions x full color RGB x 128 brightness levels of 13 blocks.

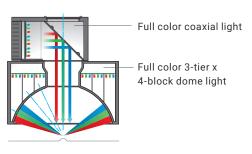



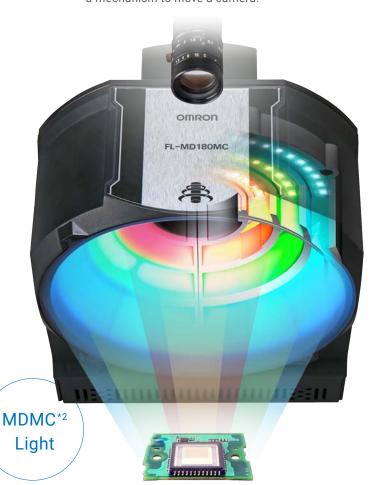

Software for flexible automation

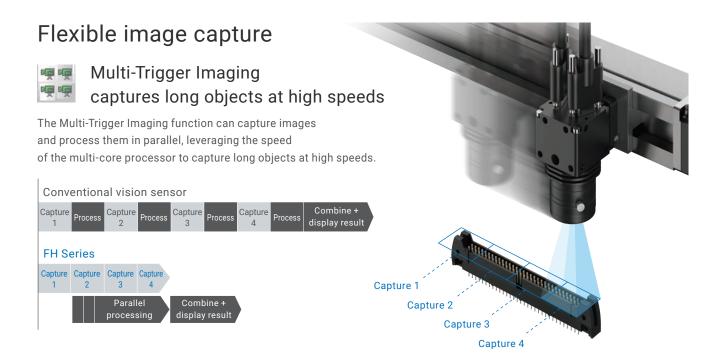




Camera Image Input HDR optimizes contrast


Camera Image Input HDR helps create optimized HDR images under variable ambient conditions. Once you specify the optimum area to capture on the image, the FH Series automatically adjusts the shutter speed while capturing images and combining the images.

Adjusts brightness to suit your specified area



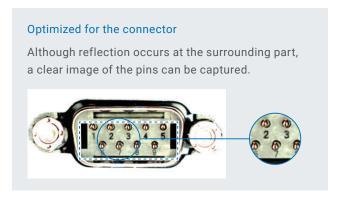

Detects low-contrast defects in high-contrast mode

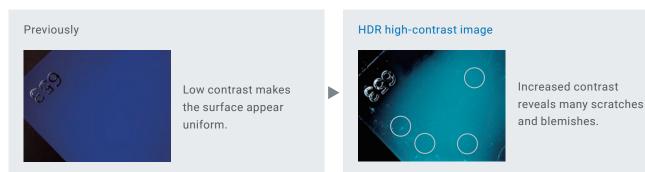


Parallel processing for different inspections

Multi-Line Random-Trigger inspects at up to four different timings

A single controller can perform inspections at different points at different timings.


Controllers installed for each process can be integrated into one, reducing initial costs and saving space.

Packaging process of pharmaceuticals

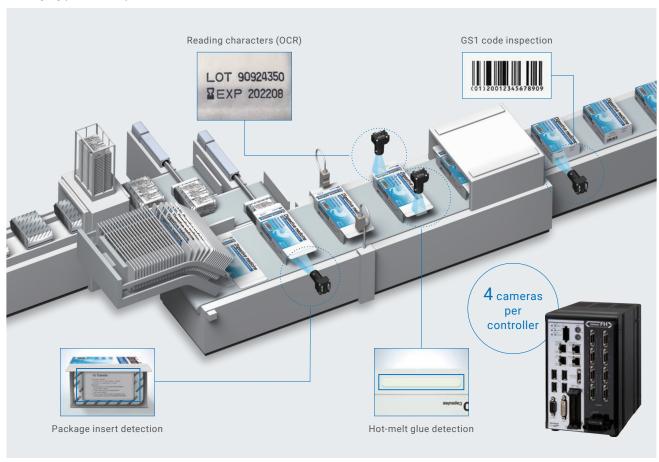


Contamination inspection of beverage containers

A single controller that can control each line saves initial costs and space.

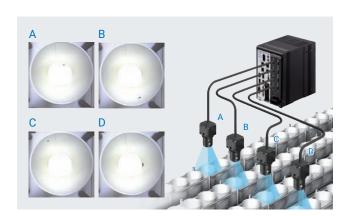

Appearance inspection of rechargeable battery cells

Four cameras can be connected to one controller, enabling simultaneous inspection of dents and scratches from four directions.

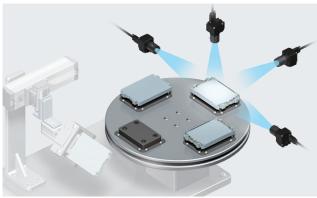


High-speed, high-precision positioning




Shape Search III is robust against shape variations

High-precision and robust positioning is possible even under the adverse conditions, such as changes in environments and materials.

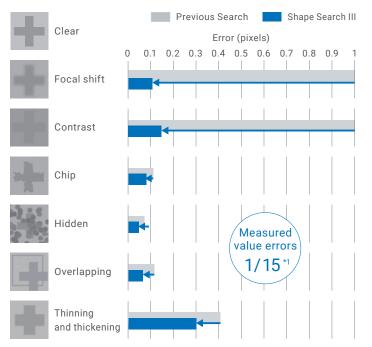

A 20.4 Mpix camera can search a positioning mark in as fast as 12 ms*2, and a 5 Mpix camera, widely used for alignment applications, in as fast as 2 ms.

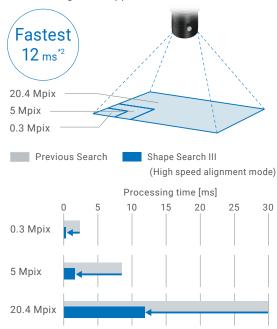


*1. The value measured under our specified conditions is provided for reference. *2. The value measured under our specified conditions is provided for reference. 20.4 Mpix camera.



Circular Scan Edge Position accurately estimates the center and radius of a circle


The new algorithm accurately detects a whole circle from a part of the circle.

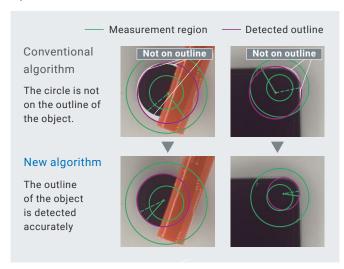



Scan Edge Position removes noise to detect edges


This algorithm accurately estimates lines even when the edges are unclear due to variations in objects or disturbance.

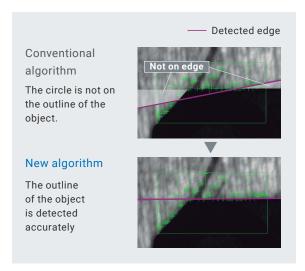




Stage Data calculates for various stages

The popular single axis $+ \theta$ axis stages as well as UVW stages can be used. The use of the same axis for both handling and positioning simplifies machine configuration.

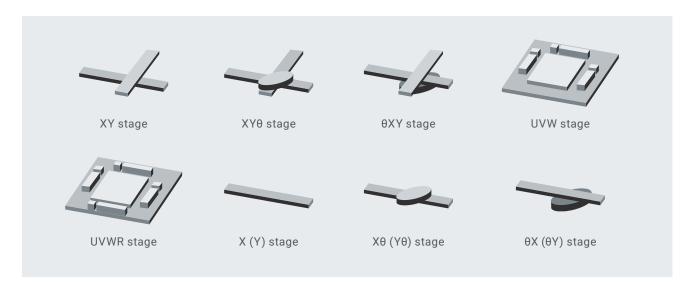

Robot Setting Tool simplifies connecting robots


Communication programs to connect robots from various vendors and FH flowcharts required for robot applications are provided free of charge. You can quickly set up robot vision applications.

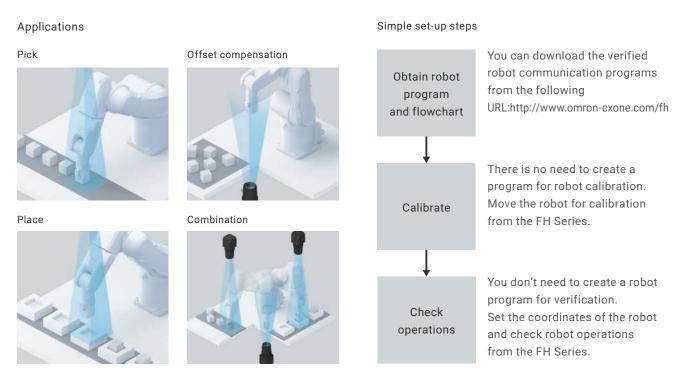

Unique identification and quality control

Unique ID associated with inspection image and result

The FH Series can associate a unique ID with the inspection image and result, and then output them to the host device. You can immediately find required inspection images and quickly identify causes of fails.

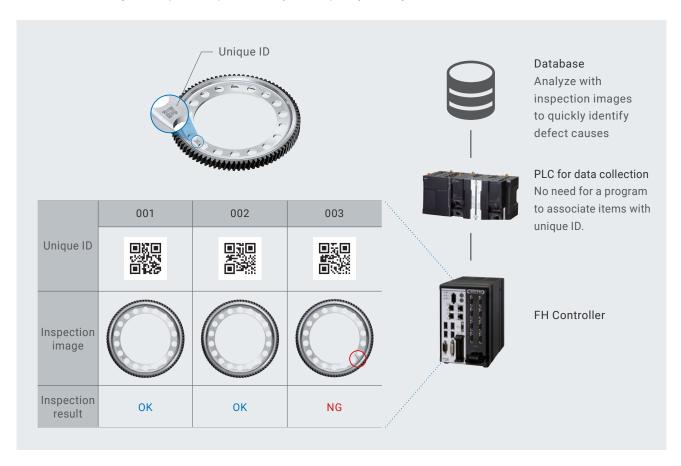


High-speed image storage The amount of inspection image data required

The amount of inspection image data required for defect cause analysis can be so large that conventional controllers are unable to store it given their storage time and capacity constraints.

The high-speed, large-capacity controller has USB 3.0 ports and the improved algorithm to compress image data at high speeds, enabling all images to be stored to meet increasing needs in quality control.

The times in the right figure provided for reference only and their accuracy cannot be guaranteed. They are measured under the following conditions:

- •FH-5051 Controller
- •5 Mpix monochrome images
- •Size of converted JPEG file: 0.6 MB

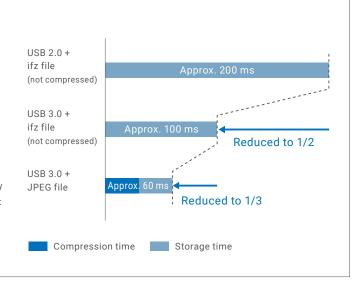





2D Code II provides powerful code reading


Recognition rate 2 times*1

 $3_{\text{times}} \\ \text{faster}^{^{\star 1}}$


The FH Series incorporates a dedicated algorithm for reliable and fast 2D code reading even under variable ambient brightness or adverse conditions such as after processing or washing.

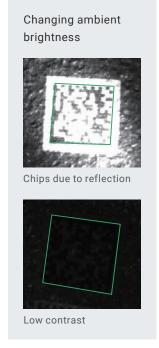

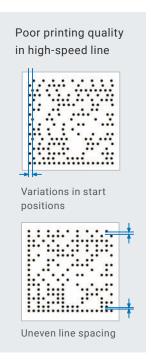

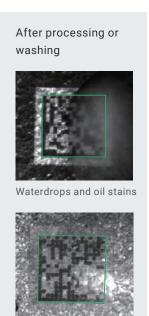

Scratched damage

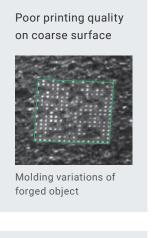

Print Quality Grading Function


- · ISO/IEC 15415
- · ISO/IEC TR29158





OCR reliably reads difficult-to-read characters


OCR can reliably read characters printed too close to each other or on curved surfaces. Also plus signs can be read.

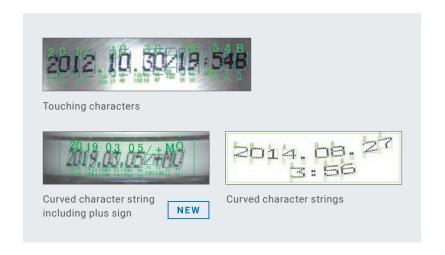



Character Inspection reads special fonts


Character Inspection recognizes special fonts and non-alphanumeric characters based on pattern search using the dictionary set up by the user.

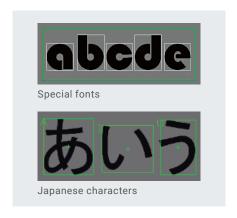


Design interface for quick setup

Integrated development environment Sysmac Studio

Sysmac Studio is a unique environment that integrates logic, motion and drives, robotics, safety, visualization, and information technologies in a single project, thus reducing the learning curve and the intra-operative software costs.

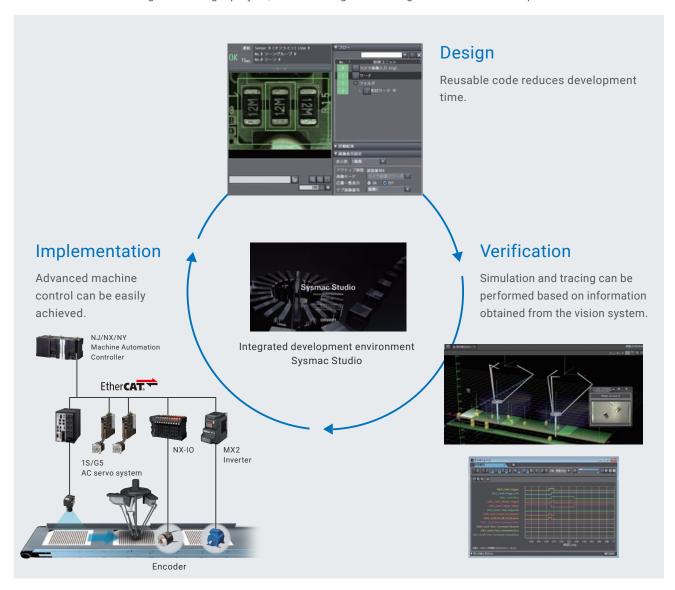

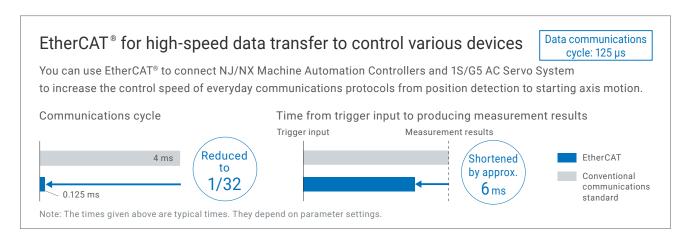

Total Design Management Editor simplifies complex processing design


This design interface includes pre-installed screens for all phases, from design through to setting and operation. Just select processing items and determine the order to manage variables. Time-consuming calculations and inputs are no longer required.

Easy setting

All the common settings of multiple scenes can be made at once. Simplified inspection flowcharts reduce setting errors and prevent from forgetting to change settings.


Efficient setting


To inspect aligned parts, the FH Series can repeat the same measurements while shifting the measurement region within the same image. This reduces setting times.

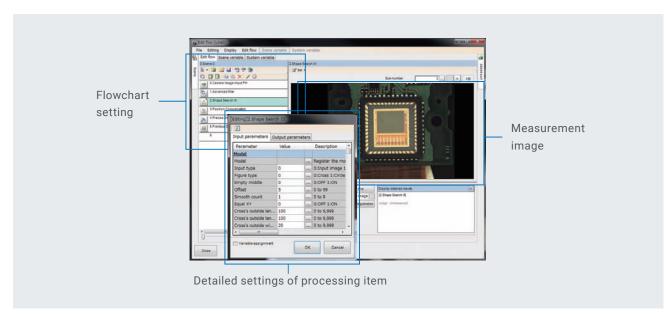

Customizable user interface simplifies operations at production sites

Showing only necessary screens for production makes the interface easier to use. Screen layout can be customized just by selecting and placing objects, without programming.

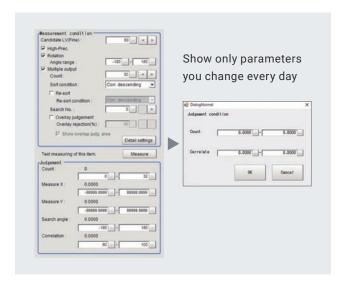

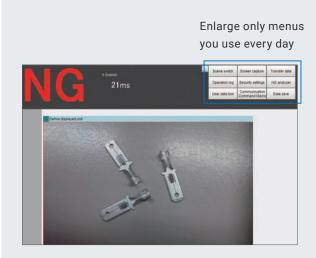

Vision System

FH-Series

Al-based automated visual inspection


- Al reproduces human sensibility and experience
- Software for flexible automation
- · Design interface for quick setup



System configuration

EtherCAT connections for FH series

Example of the FH Sensor Controllers (4-camera type)

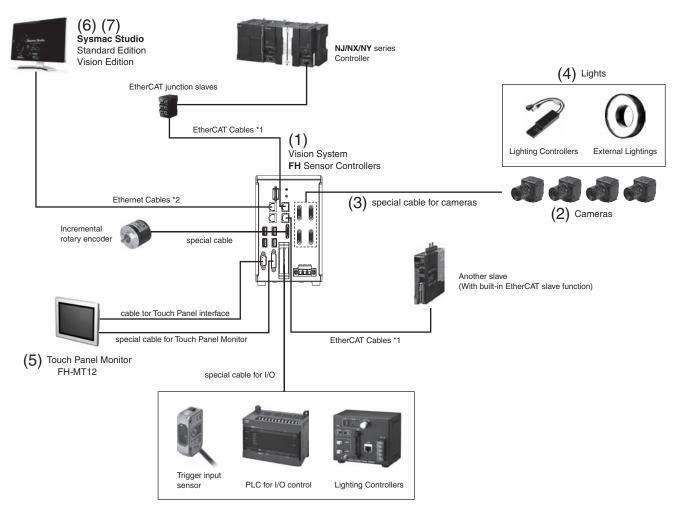

^{*1.} To use STP (shielded twisted-pair) cable of category 5 or higher with double shielding (braiding and aluminum foil tape) for EtherCAT and RJ45 connector.

^{*2.} To use STP (shielded twisted-pair) cable of category 5 or higher for Ethernet and RJ45 connector.



(1) Controllers

Select a controller based on the required processing speed and network.

	Series	CPU	Performance	Memory	No. of connectable cameras	Fieldbus
High-speed, Large-capacity Controller	FH-5551 Series	Intel [®] Core™ i7 processor 4 cores	****	RAM 32 GB, ROM 64 GB	8 max.	PROFINET, EtherNet/IP®, EtherCAT
High-speed Controller	FH-5051 Series	Intel [®] Core [™] i7 processor 4 cores	****	RAM 8 GB, ROM 32 GB	8 max.	PROFINET, EtherNet/IP®, EtherCAT
Standard Controller	FH-2051 Series	Intel® Celeron® processor 2 cores	***	RAM 8 GB, ROM 32 GB	8 max.	PROFINET, EtherNet/IP®, EtherCAT
Lite Controller	FH-L551 Series	Intel® Atom® processor 2 cores	*	RAM 4 GB, ROM 32 GB	4 max.	PROFINET, EtherNet/IP®

Optional product (sold separately) Model

Scratch Detect AI Software Installer* FH-UMAI1

(2) Cameras

Choose the right camera to suit your required number of pixels. Easy-to-use cameras with built-in light are also available.



No. of pixels	High-speed camera	Standard camera	Rolling shutter camera	Camera with built-in light
20.4 Mpix*			FH-S□21R	
12 Mpix	FH-S□X12			
5 Mpix	FH-S□X05	FZ-S□5M3	FH-S□05R	
4 Mpix	FH-S□04			
3.2 Mpix	FH-S□X03			
2 Mpix	FH-S□02	FZ-S□2M		
1.6 Mpix	FH-S□X01			
0.4 Mpix/0.3 Mpix	FH-S□X	FZ-S□		FZ-SQ

^{* 20.4} Mpix Cameras can be used with the FH-5051/2051-series High-speed, Large-capacity Controllers.

(4) Lights

Omron offers a complete line-up of lights required for image processing. The use of the camera-mount lighting controller allows you to control lighting conditions from the FH Controller, making system configuration simple.



External lighting controller

Description	LED	High-brightness LED
Camera-mount Lighting Controller	FLV-TCC	FL-TCC
Bar Light	FLV-BR	FL-BR
Direct Ring Light	FLV-DR	FL-DR
Low Angle Ring Light	FLV-DL	
Coaxial Light	FLV-CL	
Shadowless Light	FLV-FR/FP/FS/FQ	
Spot Light	FLV-EP	
Direct Back/Edge Type Light	FLV-DB/FB	
Dome Light	FLV-DD	
Photometric Stereo Light *		FL-PS

^{*} The FL-TCC Camera-mount Lighting Controller cannot be used. Use the FL-TCC1PS Lighting Controller for Photometric Stereo Light.

Built-in lighting controller

Description	Model
MDMC Light	FL-MD

Refer to the Vision Accessory Catalog (Cat. No. Q198) for details.

(5) Touch panel monitor

The touch panel monitor is optimized for the operation of the FH Series.



Description	Model
Touch Panel Monitor 12.1 inches	FH-MT12
DVI-Analog Conversion Cable for Touch Panel Monitor	FH-VMDA □□
USB Cable for Touch Panel Monitor	FH-VUAB □□

^{*} RS-232C cables for long-distance connections are also available Refer to Ordering Information for details.

(3) Camera cables

The cable line-up includes bend-resistant cables and right-angle cables. Use the FZ-VSJ Cable Extension Unit for cable extensions.



★: The more stars, the higher the performance

Description	Model
Camera Cable	FZ-VS□ □□M
Bend-resistant Camera Cable	FZ-VSB3 □□M
Super-bend-resistant Camera Cable	FZ-VSBX □□M
Right-angle Camera Cable	FZ-VSL□ □□M
Bend-resistant Right-angle Camera Cable	FZ-VSLB3 □□M
Cable Extension Unit	FZ-VSJ

(6) Sysmac Studio

The development environment for the Sysmac platform allows you to configure and simulate the FH Series on your PC.



Description	Model
DVD for installation	SYSMAC-SE200D
Software license (Vision Edition)	SYSMAC-VE001L

(7) Application producer

This development environment enables you to customize FH functions. It includes sample codes and wizards that will help you develop your own interfaces and processing items.

Description	Model
DVD for installation	FH-AP1
Software license	FH-AP1L

^{*} This product can be installed on the FH-5□51-series Controller (version 6.40 or later).

FH-Series

Ordering Information

FH Series Sensor Controllers

			Al function		No. of		
ltem		CPU	Al Scratch Detect Filter *1	Al FineMatching	cameras	Output	Model
	High-speed,				2	NPN/PNP	FH-5551
	Large-capacity	Intel [®] Core [™] i7 processor 4 cores	Available	Available	4	NPN/PNP	FH-5551-10
marana (=ng	Controller	processor 4 cores			8	NPN/PNP	FH-5551-20
					2	NPN/PNP	FH-5051
	High-speed Controller	Intel [®] Core TM i7 processor 4 cores	Available	Available	4	NPN/PNP	FH-5051-10
					8	NPN/PNP	FH-5051-20
	Standard Controller	Intel® Celeron® processor 2 cores	Not available	Available	2	NPN/PNP	FH-2051
-					4	NPN/PNP	FH-2051-10
					8	NPN/PNP	FH-2051-20
	Roy type controllers	Intel® Atom®		Available *2	2	NPN/PNP	FH-L551
	Box-type controllers processor 2 cores	Not available	Available 2	4	NPN/PNP	FH-L551-10	

^{*1} Optional FH-UMAI1 Scratch Detect AI Software Installer is required. *2 Use in conjunction with 0.3 or 0.4 million-pixel cameras.

Optional Products (Sold Separately)

Item	Model
Scratch Detect Al Software Installer *	FH-UMAI1

 $^{^\}star$ This product can be installed on the FH-5 $\!\Box$ 51-series Controller (version 6.40 or later).

Cameras

	Item	Lens mount	Descriptions	Color / Monochrome	Image Acquisition Time *1	Model
	Digital CMOS Cameras		20.4 million pixels	Color	40.0 *0	FH-SC21R
	(Lens required)	C mount	(Supported controller: FH-5□51(-□)/2051(-□) Series) *2	Monochrome	42.6 ms *3	FH-SM21R
			10 1111 1 10	Color	24.2	FH-SCX12
			12 million pixels *2	Monochrome	- 24.9 ms *3	FH-SMX12
			5 million pixels	Color	10.3 ms *3	FH-SCX05
			5 million pixels	Monochrome	10.5 1115 3	FH-SMX05
	High-speed Digital CMOS Cameras	C mount	3.2 million pixels	Color	6.6 ms *3	FH-SCX03
	(Lens required)	Cilibuni	3.2 million pixels	Monochrome	0.01115 3	FH-SMX03
			1.6 million pixels	Color	6.5 ms	FH-SCX01
0			1.0 million pixels	Monochrome	6.5 ms	FH-SMX01
1			0.4 million pixels	Color	1.9ms	FH-SCX
			0.4 million pixels	Monochrome	1.51115	FH-SMX
	High-speed Digital CMOS Cameras	M42 mount	12 million pixels *2	Color	25.7 ms *3	FH-SC12
Sylvan	(Lens required)	W42 Mount	12 million pixolo 2	Monochrome		FH-SM12
			4 million nivele	Color	8.5 ms *3	FH-SC04
			4 million pixels	Monochrome		FH-SM04
	High-speed Digital		2 million nivele	Color	4.6 ms *3	FH-SC02
	CMOS Cameras (Lens required)	C mount	2 million pixels	Monochrome	4.0 1115 3	FH-SM02
	(Lens required)		0.3 million pixels	Color	3.3 ms	FH-SC
			0.5 million pixels	Monochrome	0.0 1113	FH-SM
			Eilliitl-	Color	74.7	FH-SC05R
	Digital CMOS Cameras		5 million pixels	Monochrome	71.7ms	FH-SM05R
	(Lens required)	C mount		Color		FZ-SC5M3
(B. B)			5 million pixels	Monochrome	38.2 ms	FZ-S5M3
				Color		FZ-SC2M
	Digital CCD Cameras	CD Cameras	2 million pixels	Monochrome	33.3 ms	FZ-S2M
	(Lens required)	C mount		Color		FZ-SC
1		0.3 million	0.3 million pixels	Monochrome	12.5 ms	FZ-S

	Item	Lens mount	Descriptions	Color / Monochrome	Image Acquisition Time *1	Model
		Lenses for small camera required	300,000-pixel flat type	Color	12.5 ms	FZ-SFC
(A) 4	Small Digital			Monochrome		FZ-SF
	CCD Cameras (Lens required)			Color		FZ-SPC
O. I.				Monochrome		FZ-SP
4	Intelligent Compact Digital	Built-in lens	Narrow view	Color	- 16.7 ms	FZ-SQ010F
			Standard view	Color		FZ-SQ050F
•			Wide View (long-distance)	Color		FZ-SQ100F
			Wide View (short-distance)	Color		FZ-SQ100N

^{*1} The image acquisition time does not include the image conversion processing time of the sensor controller.
The camera image input time varies depending on the sensor controller model, number of cameras, and camera settings. Check before you use the camera.
*2 Up to four cameras of this model can be connected to one controller. Up to eight cameras including other models can be connected to an FH-5551-20, 5051-20 or 2051-20.

*3	Frame rate in high speed mode when the camera is connected using two camera cables. For other conditions, refer to the table on the next page.	

Model			FH- SM02	FH- SC02	FH- SM04	FH- SC04	FH- SM12	FH- SC12	FH- SMX	FH- SCX	FH- SMX01	FH- SCX01	FH- SMX03	FH- SCX03	FH- SMX05	FH- SCX05	FH- SMX12	FH- SCX12	FH- SM21R	FH- SC21R
	age quisition ne 1 Cables	High Speed Mode *6		ms	8.5	ms	25.7	ms		-	-		6.6	ms	10.3	3 ms	24.9	ms	42.6	3 ms
Image Acquisition		Standard Mode	9.7	ms	17.9) ms	51.3	ms		-	-	-	14.1	ms	22.1	ms	53.5	ms	90.1	l ms
Time *4		High Speed Mode *6	9.2	ms	17.0) ms	51.3	ms	1.9	ms	6.5	ms	13.2	! ms	20.6	s ms	50.0	ms	83.3	3 ms
		Standard Mode	19.3	3 ms	35.8	3 ms	102.0	0 ms	3.8	ms	14.7	' ms	28.2	! ms	44.1	ms	106.4	4 ms	175.4	4 ms

^{*4} The image acquisition time does not include the image conversion processing time of the sensor controller.
*5 Two Camera ports of the controller are used per one camera.
*6 Up to 5 m Camera Cable length.

Camera Cables

Item	Descriptions	Model *3
0	Camera Cable Cable length: 2 m, 3 m, 5 m, or 10 m *2	FZ-VS3 □M
19	Bend resistant Camera Cable Cable length: 2 m, 3 m, 5 m, or 10 m *2	FZ-VSB3 □M
19	Super Bend resistant Camera Cable Cable length: 5 m or 10 m	FZ-VSBX □M
	Right-angle Camera Cable *1 Cable length: 2 m, 3 m, 5 m, or 10 m *2	FZ-VSL3 □M
7	Bend resistant Right-angle Camera Cable *1 Cable length: 2 m, 3 m, 5 m, or 10 m *2	FZ-VSLB3 □M
.9	Long-distance Camera Cable Cable length: 15 m *2	FZ-VS4 15M
.0	Long-distance Right-angle Camera Cable *1 Cable length: 15 m *2	FZ-VSL4 15M
	Cable Extension Unit Up to two Extension Units and three Cables can be connected. (Maximum cable length: 45 m *2)	FZ-VSJ

This Cable has an L-shaped connector on the Camera end.

The maximum cable length depends on the camera being connected, and the model and length of the cable being used. For further information, refer to the Cameras / Cables Connection Table and Maximum Extension Length Using Cable Extension Units FZ-VSJ table.

When a High-speed Digital CMOS Camera FH-S 02/-S 04/-S 12/-S X03/-S X05/-S X12/-S 21R is used in the high speed mode of transmission speed, two

camera cables are required.

Insert the cables length into □ in the model number as follows. 2 m = 2, 3 m = 3, 5 m = 5, 10 m = 10

Cameras / Cables Connection Table

					High-sp	eed Digital CMOS	cameras			
			300,000-pixel	2 millio	n-pixel	4 millio	n-pixel	12 millio	on-pixel	
Camera Cables	Model	Cable	FH-SM/SC	FH-SM0)2/SC02	FH-SM	04/SC04	FH-SM12/SC12		
		length	1	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select	
		2 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Camera Cables Right-angle	FZ-VS3	3 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
camera cables	FZ-VSL3	5 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
		10 m	Yes	No	Yes	No	Yes	No	Yes	
Bend resistant		2 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
camera cables Bend resistant	sistant FZ-VSB3	3 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Right-angle		5 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Camera Cable		10 m	Yes	No	Yes	No	Yes	n of transmission speed select Yes Yes Yes No Yes Yes Yes	Yes	
Super Bend resistant	FZ-VSBX	5 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Camera Cable	FZ-VODA	10 m	Yes	No	Yes	No	Yes	No	Yes	
Long-distance camera cable Long-distance right-angle camera cable	FZ-VS4 FZ-VSL4	15 m	Yes	No	Yes	No	Yes	No	Yes	

			High-speed Digital CMOS cameras											
			400,000-pixel Cable FH-SMX/SCX		'		•		5 millio	n-pixel	12 milli	on-pixel		
0		Cable							FH-SMX05/SCX05		FH-SMX12/SCX12			
Camera Cables	Model	length	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select		
		2 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Camera Cables	ngle FZ-VS3	3 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Right-angle camera cables		5 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
		10 m	No	Yes	No	Yes	No	Yes	No	Yes	Yes No Yes	Yes		
Bend resistant	FZ-VSB3 FZ-VSLB3	2 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
camera cables Bend resistant		3 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Right-angle		5 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Camera Cable		10 m	No	Yes	No	Yes	No	Yes	No	Yes	mode of transmission speed select Yes Yes Yes No Yes Yes Yes Yes	Yes		
Super Bend	EZ VODY	5 m	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
resistant Camera Cable	FZ-VSBX	10 m	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes		
Long-distance camera cable Long-distance right-angle camera cable	FZ-VS4 FZ-VSL4	15 m	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes		

				Digital CM	OS Camera		Digital CC	D cameras
			5 million-pixel	20.4 mill	ion-pixel	5 million-pixel	300,000-pixel	2 million-pixel
Camera Cables	Model	Cable length	FH-SM05R/ SC05R	FH-SM21	R/SC21R	FZ-S5M3/ SC5M3	FZ-S/SC	FZ-S2M/SC2M
			-	High speed mode of transmission speed select Standard mode of transmission speed select	-	ı	-	
	FZ-VS3 FZ-VSL3	2 m	Yes	Yes	Yes	Yes	Yes	Yes
Camera Cables Right-angle		3 m	Yes	Yes	Yes	Yes	Yes	Yes
camera cables		5 m	Yes	Yes	Yes	Yes	Yes	Yes
		10 m	Yes	No	Yes	No	Yes	Yes
Bend resistant	FZ-VSB3 FZ-VSLB3	2 m	Yes	Yes	Yes	Yes	Yes	Yes
camera cables Bend resistant		3 m	Yes	Yes	Yes	Yes	Yes	Yes
Right-angle		5 m	Yes	Yes	Yes	Yes	Yes	Yes
Camera Cable		10 m	Yes	No	Yes	No	Yes	Yes
Super Bend		5 m	Yes	Yes	Yes	Yes	Yes	Yes
resistant Camera Cable	FZ-VSBX	10 m	Yes	No	Yes	No	Yes	Yes
Long-distance camera cable Long-distance right-angle camera cable	FZ-VS4 FZ-VSL4	15 m	Yes	No	Yes	No	Yes	Yes

Camera Cables	Model	Cable	Small digital CCD cameras Pen type / flat type	Intelligent Compact Digital CMOS Camera
Camera Cables	Wiodei	length	FZ-SF/SFC FZ-SP/SPC	FZ-SQ□
	FZ-VS3 FZ-VSL3	2 m	Yes	Yes
Camera Cables Right-angle		3 m	Yes	Yes
camera cables		5 m	Yes	Yes
		10 m	Yes	Yes
Bend resistant	FZ-VSB3 FZ-VSLB3	2 m	Yes	Yes
amera cables Bend resistant		3 m	Yes	Yes
Right-angle		5 m	Yes	Yes
amera Čable		10 m	Yes	Yes
Super Bend esistant	FZ-VSBX	5 m	Yes	Yes
Camera Cable	FZ-VODA	10 m	Yes	Yes
Long-distance camera cable Long-distance right-angle camera cable	FZ-VS4 FZ-VSL4	15 m	Yes	Yes

Maximum Extension Length Using Cable Extension Units FZ-VSJ

		Transmission	No. of CH used	Maximum cable length	Max. number of	Using Cable Extension Units FZ-VSJ			
Item	Model	speed (*1)	for connection (*2)	using 1 Camera Cable (*1)	connectable Extension Units	Max.cable length	Connection configuration		
	FH-SM/SC			15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
	FH-SMX/SCX	Standard		15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
	FH-SMX01/SCX01	High speed		5 m (Using FZ-VS□/VSL□)	2	15 m	[Configuration 3] Camera cable: 5 m × 3 Extension Unit: 2		
High-speed Digital CMOS Cameras		Standard	1	15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
	FH-SM02/SC02 FH-SM04/SC04 FH-SM12/SC12	Standard	2	15 m (Using FZ-VS4/VSL4)	4 (*3)	45 m	[Configuration 2] Camera cable: 15 m × 6 Extension Unit: 4		
	FH-SMX03/SCX03 FH-SMX05/SCX05 FH-SMX12/SCX12	High speed	1	5 m (Using FZ-VS□/VSL□)	2	15 m	[Configuration 3] Camera cable: 5 m × 3 Extension Unit: 2		
			2	5 m (Using FZ-VS□/VSL□)	4 (*3)	15 m	[Configuration 4] Camera cable: 5 m × 6 Extension Unit: 4		
	FH-SM21R/SC21R	Standard	1	15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
		Ciandard	2	15 m (Using FZ-VS4/VSL4)	4 (*3)	45 m	[Configuration 2] Camera cable: 15 m × 6 Extension Unit: 4		
Digital CMOS		High speed	1	5 m (Using FZ-VS□/VSL□)	2	15 m	[Configuration 3] Camera cable: 5 m × 3 Extension Unit: 2		
Cameras			2	5 m (Using FZ-VS□/VSL□)	4 (*3)	15 m	[Configuration 4] Camera cable: 5 m × 6 Extension Unit: 4		
	FH-SM05R/SC05R			15 m (Using FZ-VS□/VSL□)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
	FZ-S5M3/SC5M3			5 m (Using FZ-VS□/VSL□)	2	15 m	[Configuration 3] Camera cable: 5 m × 3 Extension Unit: 2		
Digital CCD Cameras	FZ-S/SC FZ-S2M/SC2M			15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
Small Digital CCD Cameras Flat type/ Pen type	FZ-SF/SFC FZ-SP/SPC			15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		
Intelligent Compact Digital CMOS Camera	FZ-SQ□			15 m (Using FZ-VS4/VSL4)	2	45 m	[Configuration 1] Camera cable: 15 m × 3 Extension Unit: 2		

^{*1} The FH-S — enables switching between standard and high speed modes. In high speed mode, images can be transferred approximately two times faster than in standard mode, but the connectable cable length will be shorter.

^{*2} The FH-S has two channels to connect Camera Cables. Connection to two channels makes image transfer two times faster than connection to one channel: high speed mode using two channels can transfer approximately four times as many images as standard mode using one channel.

^{*3} Each channel can be used to connect up to two Cable Extension Units: up to four extension units, two channels x two units, can be connected by using two channels.

Connection Configuration

	Connection configuration using the maximum length of Camera Cables	Remarks
Configuration 1	15 m 15 m 15 m (2) (3)	
Configuration 2	CH1 15 m 15 m 15 m 15 m (1) (2) (3) (3) 15 m 15 m CH2 (4) (5) (6)	Camera cable connector CH2 Camera cable connector CH1
Configuration 3	5 m 5 m 5 m (1) (2) (3)	
Configuration 4	CH1 5 m 5 m 5 m 5 m	Camera cable connector CH2 Camera cable connector CH2 CH1

Select the Camera Cables between the Controller and Extension Unit, between the Extension Units, and between the Extension Unit and Camera according to the Different types or lengths of Camera Cables can be used for (1), (2), and (3) as well as for (4), (5), and (6). However, the type and length of Camera Cable (1) must be the same as those of Camera Cable (4), (2) must be the same as (5), and (3) must be the same as (6).

Monitor

Item	Descriptions	Model
	Touch Panel Monitor 12.1 inches For FH Sensor Controllers *	FH-MT12
	LCD Monitor 8.4 inches	FZ-M08

^{*} FH Series Sensor Controllers version 5.32 or higher is required.

Monitor Cables

Item	Descriptions	Model
	DVI-Analog Conversion Cable for Touch Panel Monitor/LCD Monitor Cable length: 2 m, 5 m or 10 m	FH-VMDA □M *1
	RS-232C Cable for Touch Panel Monitor Cable length: 2 m, 5 m or 10 m	XW2Z-□□□PP-1 *2
19	USB Cable for Touch Panel Monitor Cable length: 2 m or 5 m	FH-VUAB □M *1

^{*1} Insert the cables length into \square in the model number as follows. 2 m = 2, 5 m = 5, 10 m = 10

A video signal cable and an operation signal cable are required to connect the Touch Panel Monitor.

Signal	Cable	2 m	5 m	10 m
Video signal	DVI-Analog Conversion Cable	Yes	Yes	Yes
Touch panel operation	USB Cable	Yes	Yes	No
signal	RS-232C Cable	Yes	Yes	Yes

Parallel I/O Cables/Encoder Cable

Item	Descriptions	Model
7	Parallel I/O Cable *1 Cable length: 2m, 5m or 15m	XW2Z-S013- □ *2
	Parallel I/O Cable for Connector-terminal Conversion Unit *1 Cable length: 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m Connector-Terminal Block Conversion Units can be connected (Terminal Blocks Recommended Products: OMRON XW2K-34G-T)	XW2Z- □□□ EE *3
	Ultra-Compact Interface Wiring System (General-Purpose)	XW2K-34G-T *4
0	Encoder Cable for line-driver Cable length: 1.5 m	FH-VR 1.5M

² Cables are required for all I/O signals.

^{*2} Insert the cables length into $\square\square\square$ in the model number as follows. 2 m = 200, 5 m = 500, 10 m = 010.

Insert the cables length into in the model number as follows. 2 m = 2, 5 m = 5, 15 m = 15
Insert the cables length into in the model number as follows. 0.5 m = 050, 1 m = 100, 1.5 m = 150, 2 m = 200, 3 m = 300, 5 m = 500
Refer to the XW2K Series Datasheet (Cat. No. G152) for details.

Parallel Converter Cable

When you change to connect the F series, FZ5 series, or FZ5-L series to FH series Sensor Controller, you can convert by using the appropriate parallel converter cable of FH-VPX series under the usable condition.

Item	Applicable Model		Usable Condition	Model
	FZ⊡ series		 Do not use RESET signal. * Use with COMIN and COMUT are same power source. 	
~	FZ□-L35x series		Do not use RESET signal. *	FH-VPX-FZL
	F160 series	F160-C10	Do not use RESET signal.* Use with COMIN and COMOUT are same power source. Do not use DI5 and DI6.	FH-VPX-F160
	F210 series	F210-C10	Do not use RESET signal. *	
(1 2 10 301163	F210-C10-ETN	Use with COMIN and COMOUT are same power source.	FH-VPX-F210
	F500 series	F500-C10	Do not use DI8 and DI9.	

^{*} Even if RESET signal cannot be use by conversion, conversion is possible to convert satisfying other usable condition. **Note:** Cannot be used for the F160-C10CP/-C10CF.

Recommended EtherCAT and EtherNet/IP Communications Cables

Use Straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (braiding and aluminum foil tape) for EtherCAT. Use Straight or cross STP (shielded twisted-pair) cable of category 5 or higher for EtherNet/IP.

Cable with Connectors

ltem	Appearance	Recommended manufacturer	Cable length (m)	Model
			0.3	XS6W-6LSZH8SS30CM-Y
Cable with Connectors on Both Ends (RJ45/RJ45)			0.5	XS6W-6LSZH8SS50CM-Y
Standard RJ45 plugs type *1		OMRON	1	XS6W-6LSZH8SS100CM-Y
Wire Gauge and Number of Pairs: AWG26, 4-pair Cable Cable Sheath material: LSZH *2		OWRON	2	XS6W-6LSZH8SS200CM-Y
Cable color: Yellow *3			3	XS6W-6LSZH8SS300CM-Y
			5	XS6W-6LSZH8SS500CM-Y
			0.3	XS5W-T421-AMD-K
Cable with Connectors on Both Ends (RJ45/RJ45)	-		0.5	XS5W-T421-BMD-K
Rugged RJ45 plugs type *1	*0	OMRON	1	XS5W-T421-CMD-K
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable			2	XS5W-T421-DMD-K
Cable color: Light blue			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
		OMRON	0.5	XS5W-T421-BM2-SS
Cable with Connectors on Both Ends (M12 Straight/M12 Straight)			1	XS5W-T421-CM2-SS
Shield Strengthening Connector cable *4			2	XS5W-T421-DM2-SS
M12/Smartclick Connectors			3	XS5W-T421-EM2-SS
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable Cable color: Black			5	XS5W-T421-GM2-SS
Cable colon black			10	XS5W-T421-JM2-SS
			0.5	XS5W-T421-BMC-SS
Cable with Connectors on Both Ends (M12 Straight/RJ45) Shield Strengthening Connector cable *4			1	XS5W-T421-CMC-SS
M12/Smartclick Connectors	100	OMRON	2	XS5W-T421-DMC-SS
Rugged RJ45 plugs type		OIVIRON	3	XS5W-T421-EMC-SS
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable Cable color: Black			5	XS5W-T421-GMC-SS
			10	XS5W-T421-JMC-SS

^{*1} Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the Industrial Ethernet Connectors Catalog (Cat. No. G019).

^{*2} The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PÚR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

^{*3} Cables colors are available in yellow, green, and blue.

^{*4} For details, contact your OMRON representative.

FH-Series

Cables / Connectors

Ite	em	Recommended manufacturer	Model
Products for EtherCAT or EtherNet/IP	Cable	Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5 x 4P CP *1
(1000BASE-T/100BASE-TX) Wire gauge and number of pairs:	Cable	Kuramo Electric Co.	KETH-SB *1
AWG24, 4-pair cable	RJ45 Connector	Panduit Corporation	MPS588-C *1
	Cabla	Kuramo Electric Co.	KETH-PSB-OMR *2
Products for EtherCAT or EtherNet/IP	Cable	JMACS Japan Co., Ltd.	PNET/B *2
(100BASE-TX/10BASE-T) Wire gauge and number of pairs: AWG22, 2-pair cable	RJ45 Assembly Connector	OMRON	XS6G-T421-1 *2

^{*1} We recommend you to use the above Cable and RJ45 Connector together.

Automation Software Sysmac Studio

Please purchase a DVD and licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. The license does not include the DVD.

lánus	Supplifications			Model
Item	Specifications	Number of licenses	Media	Wodei
	The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of	(Media only)	Sysmac Studio (32bit) DVD *2	SYSMAC-SE200D
	machine automation controllers including the NJ/NX-series CPU Units, NY-series Industrial PC, EtherCat Slave, and the HMI.	(Media only)	Sysmac Studio (64bit) DVD *2	SYSMAC-SE200D-64
Sysmac Studio Standard Edition	Sysmac Studio runs on the following OS. *1 Windows 7 (32-bit/64-bit version) /	1 license	_	SYSMAC-SE201L
Ver.1.□□	Windows 8.1 (32-bit/64-bit version) / Windows 10 (32-bit/64-bit version) /	3 license	_	SYSMAC-SE203L
	Windows 11 (64-bit version)	10 license	_	SYSMAC-SE210L
	This software provides functions of the Vision Edition. Refer to OMRON website for details such as supported models and	30 license	_	SYSMAC-SE230L
	functions.	50 license	_	SYSMAC-SE250L
Sysmac Studio Vision Edition Ver.1. \(\subseteq \text{ *3 *4} \)	Sysmac Studio Vision Edition is a limited license that provides selected functions required for Vision Sensor FH-series/ Smart Camera FHV7-series/FQ-M-series settings.	1 license	_	SYSMAC-VE001L
Sysmac Studio Robot Additional Option *4	Sysmac Studio Robot Additional Option is a license to enable the Vision & Robot integrated simulation.	1 license	_	SYSMAC-RA401L

Site licenses are available for users who will run Sysmac Studio on multiple computers. Ask your OMRON sales representative for details.
 Sysmac Studio version 1.07 or higher supports the FH Series. Sysmac Studio does not support the FH-L551/-L551-10.

Model "SYSMAC-SE200D-64" runs on Windows 10 (64bit) or higher.

The same media is used for both the Standard Edition and the Vision Edition.

With the Vision Edition, you can use only the setup functions for FH-series/FQ-M-series Vision Sensors.

This product is a license only. You need the Sysmac Studio Standard Edition DVD media to install it.

Development Environment

Please purchase a CD-ROM and licenses the first time you purchase the Application Producer. CD-ROMs and licenses are available individually. The license does not include the CD-ROM.

Product	Specifications	Number of Model Standards licenses	Media	Model
	Software components that provide a development environment to further customize the standard controller features of the FH Series. System requirements: CPU: Intel Pentium Processor (SSE2 or higher) OS: Windows 7 Professional (32/64bit) or Enterprise(32/64bit) or Ultimate (32/64bit), Windows 8 Pro (32/64bit) or Enterprise (32/64bit),	— (Media only)	CD-ROM	FH-AP1
Application Producer	Windows 8.1 Pro (32/64bit) or Enterprise (32/64bit), Windows 10 Pro (32/64bit) or Enterprise (32/64bit), Windows 11 Pro (64bit) or Enterprise (64bit) .NET Framework: .NET Framework 3.5 SP1 or higher Memory: At least 2 GB RAM Available disk space: At least 2 GB Browser: Microsoft® Internet Explorer 6.0 or later Display: XGA (1024 × 768), True Color (32-bit) or higher Optical drive: CD/DVD drive The following software is required to customize the software: Microsoft® Visual Studio® 2008 Professional or Microsoft® Visual Studio® 2010 Professional	1 license	_	FH-AP1L

^{*2} We recommend you to use the above Cable and RJ45 Assembly Connector together.

Accessories

Item			Descriptions		
	USB Memory		2 GB		FZ-MEM2G
4	USB Memory		16 GB		FZ-MEM16G
4cs	SD Card		2 GB		HMC-SD292 *2
***	OD Gard		4 GB		HMC-SD492 *2
	Display/USB Switcher				FZ-DU
_	Mouse Recommended Pr Driverless wired mouse (A mouse that requires the		e installed is not supported.)		
#SE (2)		3 port	Power supply voltage: 20.4 to 28.8 VDC	Current consumption: 0.08 A	GX-JC03
200 200 200	EtherCAT junction slaves	6 port	(24 VDC -15 to 20%)	Current consumption: 0.17 A	GX-JC06
250	Industrial Switching Hubs for EtherNet/IP and Ethernet	5 port		Current consumption: 0.07 A	W4S1-05D
-	Calibration Plate	1		'	FZD-CAL
		DIN rail mounting (For Lite Controlle			FH-XDM-L
	Common items related to DIN rail	DIN 35mm rail	PHOENIX CONTACT	Length: 75.5/95.5/115.5/200 cm Height: 7.5mm Material: Iron Surface: Conductive	NS 35/7,5 PERF
	(for FH-L551/-L551-10)			Length:75.5/95.5/115.5/200 cmHeight: 15mmMaterial: IronSurface: Conductive	NS 35/15 PERF
03		End plate	PHOENIX CONTACT	Need 2 pieces each Sensor Controller	CLIPFIX 35
				LED	FLV Series
			External lighting controller	High-brightness LED	FL-BR/DR Serie
_	External Lights *1	External Lights *1		Photometric Stereo Light	FL-PS Series
			Built-in lighting controller	MDMC Light	FL-MD Series
4			Zam in lighting controller	Mounting Bracket	FQ-XL
	For Intelligent Compact Di	For Intelligent Compact Digital CMOS Camera			FQ-XL2
		Polarizing Filter Attachment			
	Mounting Bracket for FZ-S	□, FH-S□05R, FZ	-S□X		FZ-S-XLC
	Mounting Bracket for FZ-S				FZ-S2M-XLC
_	Mounting Bracket for FH-S	S□, F <mark>Z-S□5M□, F</mark> H	H-S□X05, FH-S□X12, FH-S□2	:1R	FH-SM-XLC
	Mounting Bracket for FH-S				FH-SM12-XLC
	M42 - F Mount Conversion	n Adapter			FH-ADF/M42-10

Recommended SD Cards

For inquiries regarding the purchase and specifications of these products, please contact below.

Item	Recommended manufacturer	Capacity	Model	Contact
1 2. 	HAGIWARA Solutions Co., Ltd.	2 GB	NSD6-002GS(P□□SEI	Inquiry of purchase Sales Agencies https://www.hagisol.com/dealer/
4- 		4 GB	NSDB-004GS(N□□SEI	Inquiry of specification HAGIWARA Solutions Co., Ltd. https://www.hagisol.com/support/

^{*1} Refer to the Vision Accessory Catalog (Cat. No. Q198) for details.
*2 This SD card cannot be used with the FH-L551/-L551-10. Use the recommended SD cards listed below.

FH-Series

Lenses

Refer to the Vision Accessory Catalog (Cat. No. Q198) for details.

				Recommended lens	
Resolution	Camera Model	Size of image element	Standard Lens	Telecentric Lens	Vibrations and Shocks Resistant Lens
	FZ-SF/SFC		FZ-LES Series		
200 000 mixal	FZ-SP/SPC	1/2" aguivalent	FZ-LES Series		
300,000-pixel	FZ-S/SC	1/3" equivalent			
	FH-SM/SC		SV-V Series		VS-MCA Series
400,000-pixel	FH-SMX/SCX	1/2.9" equivalent		VS-TCH Series	Non-telecentric Macro
1.6 million-pixel	FH-SMX01/SCX01	1/2.9 equivalent	SV-H Series		VS-MC Series
O million nivel	FZ-S2M/SC2M	1/1.8" equivalent	SV-FI Selles		
2 million-pixel	FH-SM02/SC02	2/3" equivalent *1	VS-H1 Series	VS-TEV Series	VS-MCH1 Series
3.2 million-pixel	FH-SMX03/SCX03	1/1.8" equivalent	SV-H Series	VS-TCH Series	VS-MCA Series Non-telecentric Macro VS-MC Series
4 million-pixel	FH-SM04/SC04	1" equivalent	VS-H1 Series	VS-TEV Series	VS-MCH1 Series
	FH-SM05R/SC05R	1/2.5" equivalent			VS-MCA Series
5 million-pixel	FZ-S5M3/SC5M3	2/3" equivalent	SV-H Series	VS-TCH Series	Non-telecentric Macro
	FH-SMX05/SCX05	2/3" equivalent			VS-MC Series
12 million-pixel	FH-SMX12/SCX12	1.1" equivalent	VS-LLD Series VS-HVA Series	VS-TEV Series	
	FH-SM12/SC12	1.76" equivalent	VS-L/M42-10 Series		VS-MCL/M42-10 Series
20.4 million-pixel	FH-SM21R/SC21R	1" equivalent	VS-LLD Series VS-HVA Series	VS-TEV Series	VS-MCH1 Series

^{*1} A lens recommended for a 1" image element should be used for an image element size equivalent to 2/3". Vignetting may occur with a lens recommended for a 2/3" image element.

Ratings and Specifications (FH Sensor Controllers)

High-speed, Large-capacity Controller

Sensor Contro Sensor Contro			FH-5551/5051	FH-5551/5051 Series FH-5551/5051-10	FH-5551/5051-20	FH-2051	FH-2051 Series FH-2051-10	FH-2051-20
Parallel IO			NPN/PNP (common) FH-5551 series : 32G	P PAM 64CP POM	•		•	•
Memory, Stora	ge		FH-5051 series : 32G FH-5051 series : 8G F			8G RAM, 64GB ROI	М	
Number of cor	es		4 cores			2 cores		
	Operation	Standard Double Speed Multi-input	Yes Yes					
	Mode	Non-stop adjustment mode	Yes					
	Daniel Daniel	Multi-line random-trigger mode	Yes (Maximum 8 lines	s) *1				
	Parallel Proces Number of Cor	nectable Camera	Yes 2	4	8	2	4	8
		EU O	All of the FH-S series	cameras are	All of the FH-S series	All of the FH-S serie	s cameras are	All of the FH-S ser
Main	Supported Camera	FH-S series camera	connectable.		cameras are connectable. *2	connectable.		cameras are connectable. *2
unctions		FZ-S series camera		cameras are connectal	ole.			
	Camera I/F	per of Captured Images	OMRON I/F Refer to page 31.					
		of Logging Images to Sensor Controller		stem FH Series User's	Manual (Cat. No. Z365).		
	Possible Numb		128					
	Operating on UI	USB Mouse Touch Panel	Yes (wired USB and of Yes (RS-232C/USB of	driver is unnecessary ty	pe)			
	Setup	Touch ranei	•	flow using Flow editing] .			
	Language		Japanese, English, Si		tional Chinese, Korean	, German, French, Spa	anish, Italian, Vietnam	ese, Polish
	Serial Commun	Protocol	RS-232C × 1 Non-procedure (TCP/	IIDD)				
	Communication		1000BASE-T × 2	ODI)				
	EtherNet/IP Co	mmunication	Yes (Target/Ethernet					
	PROFINET Cor	mmunication	Yes (Slave/EthernelConformance class					
	EtherCAT Com	munication			Γ Communications Spe	cifications.		
			 12 inputs/31 outputs Use 1 Line. 	S:				
			Operation mode:	Except Multi-line rando	m-trigger mode.			
			 17 inputs/37 outputs Use 2 Lines. 	S:				
External Interface	Parallel I/O		 Operation mode: 	Multi-line random-trigge	er mode.			
			 14 inputs/29 outputs Use 3 to 4 Lines. 	5:				
			 Operation mode: 19 inputs/34 outputs 	Multi-line random-trigge	er mode.			
			 Use 5 to 8 Lines. 					
			 Operation mode: Input voltage: 5 V ± 5 	Multi-line random-trigge	er mode.			
	Encoder Interfa	ace	Signal: RS-422A Line Driver Level					
	Monitor Interface		Phase A/B/Z: 1 MHz DVI-I output (Analog RGB & DVI-D single link) × 1					
	USB I/F		USB3.0 host × 2 (BUS Power: Port5 V/0.5 A) USB2.0 host × 4 (BUS Power: Port5 V/0.5 A)					
	SD Card I/F		USB2.0 host × 4 (BUS SDHC × 1	S Power: Port5 V/0.5 A	1			
	OD Garain		POWER: Green					
	Main		ERROR: Red RUN: Green					
			ACCESS: Yellow NET RUN1: Green					
Indicator	Ethernet		LINK/ACT1: Yellow NET RUN2: Green					
Lamps			LINK/ACT2: Yellow					
	SD Card		SD POWER: Green SD BUSY: Yellow					
			ECAT RUN: Green LINK/ACT IN: Green					
	EtherCAT		LINK/ACT OUT: Gree	en				
Power-supply	voltage		ECAT ERR: Red 20.4 VDC to 26.4 VDC	C				
	When connecting	an intelligent compact digital camera ting the following light or lighting						
	controller wit	hout an external power supply FLV-TCC4, FLV-TCC3HB						
Current consumption	FLV-TCC1	EP, FL-TCC1	5.6 A max.	7.7 A max.	12.2 A max.	4.6 A max.	6.6 A max.	11.2 A max.
consumption	ina controlle	ting the following light or light-						
	FL-TCC1P Other than abo	S, FL-MD□MC	4.5 A max.	5.5 A max.	7.3 A max.	3.5 A max.	4.3 A max.	6.3 A max.
Built-in FAN	Other than abo	ve	Yes	J.J A IIIAX.	7.5 A Hax.	J.J A IIIax.	4.5 A IIIax.	0.5 A max.
	Ambient tempe	erature range	Operating: 0°C to +45		enestion)	Operating: 0°C to +5		densation)
	Ambient humic		Storage: -20 to +65°C (with no icing or condensation) Storage: -20 to +65°C (with no icing or condensation) Operating:35 to 85%RH					
		<u> </u>	-	H (with no condensation	1)			
	Ambient atmos	spnere	No corrosive gases Oscillation frequency: 10 to 150 Hz					
			Half amplitude: 0.1 mm Acceleration: 15 m/s ²					
Usage Environment	Vibration tolera	ance	Sweep time: 8 minute/count Sweep count: 10					
			Vibration direction: up and down/front and behind/left and right					
	Shock resistan	ce	Impact force: 150 m/s ² Test direction: up and down/front and behind/left and right					
	Noise		• DC power					
	Noise immunity	Fast Transient Burst	Direct infusion: 2kV, Pulse rising: 5ns, Pulse width: 50ns, Burst continuation time: 15ms/0.75ms, Period: 300ms, Application time: 1 mi **[// Uline Company Compa					
	Grounding		Direct infusion: 1kV, Pulse rising: 5ns, Pulse width: 50ns, Burst continuation time: 15ms/0.75ms, Period: 300ms, Application time: 1 Type D grounding (100 Ω or less grounding resistance) *3					
	Dimensions		190 mm × 115 mm ×	182.5 mm				
xternal	Weight		Note Height: Including Approx. 3.4 kg	the feet at the base. Approx. 3.6 kg	Approx. 3.6 kg	Approx. 3.0 kg	Approx. 3.2 kg	Approx. 3.2 kg
	Degree of prote	ection	IEC60529 IP20		pp. o.c. o.o .kg	pp. ox. o.o ng	, .pp. 37. 0.2 kg	, , , pp10x. 0.2 kg
eatures			Cover: zinc-plated ste	el plate				-
eatures	Case material							
eatures	Case material		Side plate: aluminum Instruction Sheet (Jap	(A6063) panese and English): 1,	Installation Instruction lions for EU:1, Member	Manual for FH series:1	<u>,</u>	

^{*1} According to the CPU performance, FH-2051 series is recommended to use up to two lines in this mode.
*2 Up to eight cameras can be connected in total including up to four 12 or 20.4 million-pixel cameras.
*3 Existing third class grounding

Lite Controllers

Sensor Control			FH-L551				
Sensor Control	ler Model		FH-L551	FH-L551-10			
Parallel IO			NPN/PNP (common)				
Memory, Storag	ge	Standard	4GB RAM, 32GB ROM Yes				
		Double Speed Multi-input	Yes				
	Operation Mode	Non-stop adjustment					
	Operation Mode	mode	Yes				
		Multi-line random-trigger	No				
	Parallel Processi	mode	Yes				
	Number of Conne	•	2	4			
	Supported	FH-S series camera	All of the FH-S series cameras except FH-SM21R/SC21R				
Main Func- tions	Camera	FZ-S series camera	All of the FZ-S series cameras are connectable.				
tions	Camera I/F		OMRON I/F				
		of Captured Images	Refer to page 31.				
	Possible Number Sensor Controller	of Logging Images to	Refer to the Vision System FH Series User's Manual (Cat. No. Z365).				
	Possible Number		128				
		USB Mouse	Yes (wired USB driver-less type)				
	UI Operations	Touch Panel	Yes (RS-232C/USB connection: FH-MT12)				
	Setup		Create the processing flow using Flow editing.				
	Language	,	Japanese, English, Simplified Chinese, Traditional Chinese, Korean, C	German, French, Spanish, Italian, Vietnamese, Polish			
	Serial Communic		RS-232C × 1				
	Ethernet Communication	Protocol I/F	Non-procedure (TCP/UDP) 1000BASE-T × 1				
	EtherNet/IP Comr		Yes (Target/Ethernet port)				
	PROFINET Comm		Yes (Slave/Ethernet port)				
			Conformance class A				
External	EtherCAT Commi	unication	No				
Interface			High-speed input: 1 Normal speed: 9				
	Parallel I/O		High-speed output: 4				
	Encoder Interface		Normal speed: 23				
	Monitor Interface		None DVI-I output (Analog RGB & DVI-D single link) × 1				
			USB2.0 host × 1: BUS Power: Port 5 V/0.5 A				
	USB I/F		USB3.0 × 1: BUS Power: Port 5 V/0.5 A				
	SD Card I/F		SDHC×1				
			POWER: Green ERROR: Red				
	Main		RUN: Green				
Indicator			ACCESS: Yellow				
Lamps	Ethernet		NET RUN: Green LINK/ACT: Yellow				
	SD Card		SD POWER: Green				
			SD BUSY: Yellow				
Power-supply v	EtherCAT		None 20.4 VDC to 26.4 VDC				
rower-supply v		an intelligent compact dig-	20.4 VDC to 20.4 VDC				
	ital camera	an intelligent compact dig-					
		ng the following light or ler without an external					
Current	power supply		2.7 A max.	4.4 A max.			
consumption	FLV-TCC1, FI	LV-TCC4, FLV-TCC3HB	Z./ A Iliax.	4.4 A IIIda.			
·	 When connectir 	ng the following light or					
	lighting controll	ler					
	Other than above		1.5 A max.	2.0 A max.			
Built-in FAN			No				
	Ambient tempera	ture range	Operating: 0°C to 55°C				
	<u> </u>		Storage: -25 to +70°C				
	Ambient atmosph		Operating and Storage: 10 to 90%RH (with no condensation) No corrosive gases				
	Ambient atmosph		5 to 8.4 Hz with 3.5 mm amplitude, 8.4 to 150 Hz, accelerate	tion of 9.8 m/s ²			
	Vibration tolerand	ce	100 min each in X, Y, and Z directions (10 sweeps of 10 min each = 1				
Usage Envi-	Shock resistance		Impact force: 150 m/s ²				
ronment			Test direction: up and down/front and behind/left and right • DC power				
			Direct infusion: 2kV, Pulse rising: 5ns, Pulse width: 50ns,				
	Noise immunity	Fast Transient Burst	Burst continuation time: 15ms/0.75ms, Period: 300ms, Application time: 1 min • I/O line				
	minumity		Direct infusion: 1kV, Pulse rising: 5ns, Pulse width: 50ns,				
			Burst continuation time: 15ms/0.75ms, Period: 300ms, Application time: 1 min				
	Grounding		Type D grounding (100 Ω or less grounding resistance) *				
External	Dimensions Weight		200 mm × 80 mm × 130 mm Approx. 1.5 kg	Approx. 1.5 kg			
External Features	Degree of protect	tion	IEC60529 IP20	Approx. 1.0 kg			
	Case materials		PC				
			Instruction Sheet (Japanese and English): 1, Installation Instruction M				
Accessories	•		General Compliance Information and Instructions for EU:1, Member re Power source (FH-XCN-L):1 (male)	egistration sheet: 1,			
			. 5.15. 554100 (1117011 E). 1 (111410)				

^{*} Existing third class grounding

Maximum Number of Loading Images during Multi-input

Camera	Model	Max. Number of Loading Images during Multi-input *1
Intelligent Compact Digital CMOS Cameras *2	FZ-SQ010F/-SQ050F/-SQ100F/-SQ100N	256
0.3 million pixels CCD/CMOS Cameras	FZ-S/-SC/-SF/SFC/-SH/-SHC/-SP/-SPC FH-SM/-SC	256
0.4 million pixels CMOS Cameras	FH-SMX/-SCX	256
1.6 million pixels CMOS Cameras	FH-SMX01/-SCX01	64
2 million pixels CCD Cameras	FZ-S2M/-SC2M	64
2 million pixels CMOS Cameras	FH-SM02/-SC02	51
3.2 million pixels CMOS Cameras	FH-SMX03/-SCX03	36
4 million pixels CMOS Cameras	FH-SM04/-SC04	32
5 million pixels CCD/CMOS Cameras	FZ-S5M3/-SC5M3 FH-SMX05/-SCX05/-SM05R/-SC05R	25
12 million pixels CMOS Cameras	FH-SM12/-SC12/-SMX12/-SCX12	10
20.4 million pixels CMOS Cameras	FH-SM21R/-SC21R	6

When using two camera cables for connection, the maximum number of loaded images during multi-input is twice the number given in the table. The multi-input function cannot be used when the built-in light of an intelligent compact digital camera is used. Refer to the Vision System FH/FZ5 Series User's Manual (Cat. No. Z340) for details.

FH-Series

Ratings and Specifications (Cameras)

High-speed Digital CMOS cameras

Model	FH-SM	FH-S	C FI	I-SM02	FH-SC02	FH-SM04	FH-SC	04	FH-SM12	FH-SC12
Image elements	CMOS image elements (1/3-inch equivalent)			CMOS image elements (2/3-inch equivalent) *1		CMOS image elements (1-inch equivalent)			CMOS image elements (1.76-inch equivalent)	
Color/Monochrome	Monochrome	Color	Mond	chrome	Color	Monochrome	Color		Monochrome	Color
Effective pixels	640 (H) × 480 (V)	2040	(H) × 1088	(V)	2040 (H) × 20	148 (V)		4084 (H) × 307	2 (V)
Pixel size	7.4 (µm) × 7.4 (μm)	5.5 (µ	ιm) × 5.5 (μ	ım)	5.5 (μ m) \times 5.5	5 (μm)		5.5 (μm) × 5.5 (μm)
Shutter function	Shutter speeds	Electronic shutter; Shutter speeds can be set from 20 μs to 100 ms. Electronic shutter; Shutter speeds can be set from 25 μs to 100 ms.		Electronic shutter;			Electronic shutt Shutter speeds 60 µs to 100 ms	can be set from		
Partial function	1 to 480 lines	2 to 480 li	ines 1 to 1	1088 lines	2 to 1088 lines	1 to 2048 line	s 2 to 2048	lines	4 to 3072 lines (4-line increme	nts)
Frame rate (Image Acquisition Time *2)	308 fps (3.3 ms)		219 f	219 fps (4.6 ms) *3		118 fps (8.5 ms) *3			38.9 fps (25.7 ms) *3	
Lens mounting	C mount								M42 mount	
Field of vision, installation distance	Selecting a lens	according	to the field o	f vision and	installation dista	nce				
Ambient temperature range	Operating: 0 to	40 °C, Stor	age: -25 to 6	5 °C (with n	o icing or conder	nsation)				
Ambient humidity range	Operating and	storage: 35°	% to 85% (wi	th no conde	ensation)					
Weight	Approx.105 g		Appr	ox.110 g					Approx.320 g	
Accessories	Instruction man	ual								
Model	FH-SMX	FH-SCX	FH-SMX01	FH-SCX0	1 FH-SMX03	FH-SCX03	FH-SMX05	FH-SC	CX05 FH-SMX	12 FH-SCX12
Imaga alamanta	CMOS imaga al	amanta (1/2	O in also a surive	lont)	CMOS imag	e elements	CMOS image	eleme	nts CMOS ir	nage elements

Image elements	CMOS image	CMOS image elements (1/2.9-inch equivalent)			CMOS image elements (1/1.8-inch equivalent)	CMOS image elements (2/3-inch equivalent)	CMOS imag (1.1-inch equ	
Color/Monochrome	Monochrome	Color	Monochrome	Color	Monochrome Color	Monochrome Color	Monochrome	Color
Effective pixels	720 (H) × 540) (V)	1440 (H) × 1	080 (V)	2046 (H) × 1536 (V)	2448 (H) × 2048 (V)	4092 (H) × 3	000 (V)
Pixel size	6.9 (μ m) × 6.	9 (μm)	3.45 (μm) ×	3.45 (μm)				
Shutter function	Electronic sh Shutter spee		t from 1 μs to	100 ms.			Electronic sh Shutter speed from 15 µs to	ls can be set
Partial function	4 to 540 lines (4-line incren		4 to 1080 lin (4-line increr		4 to 1536 lines (4-line increments)	4 to 2048 lines (4-line increments)	4 to 3000 lin (4-line increr	
Frame rate (Image Acquisition Time *2)	523.6 fps (1.	9 ms)	154.6 fps (6.	.5 ms)	151.4 fps (6.6 ms) *3	97.2 fps (10.3 ms) *3	40.1 fps (24.	9 ms) *3
Lens mounting	C mount							
Field of vision, installation distance	Selecting a le	ens accordin	g to the field of	vision and i	nstallation distance			
Ambient temperature range	Operating: 0 Storage: -20 (with no icing condensation	to 65 °C or	Operating: 0 Storage: -20 (with no icing condensatio	to 65 °C g or	Operating: 0 to 40 °C, Storage: -20 to 65 °C (with no icing or condens	eation)		
Ambient humidity range	Operating an	d storage: 35	5% to 85% (wit	th no conder	nsation)			
Weight	Approx.48 g	Approx.48 g Approx.85 g						
Accessories	Instruction m	anual, Gener	ral Compliance	Information	and Instructions for EU			
*1 A lens recommended f	or a 1" image	element shou	ıld be used for	an image el	ement size equivalent to 2/3	3". Vignetting may occur with	n a lens recomn	nended for

A left section of the sensor controller. The image element.

The image acquisition time does not include the image conversion processing time of the sensor controller. Frame rate in high speed mode when the camera is connected using two camera cables.

Digital CMOS Cameras

Model	FH-SM05R	FH-SC05R	FH-SM21R	FH-SC21R	FZ-S5M3	FZ-SC5M3
Image Elements	CMOS image elements	(1/2.5-inch equivalent)	CMOS image elements (1-inch equivalent)		CMOS image elements (2/3-inch equivalent)	
Color/Monochrome	Monochrome	Color	Monochrome	Color	Monochrome	Color
Effective Pixels	2592 (H) × 1944 (V)	-	5544 (H) × 3692 (V)		2448 (H) × 2048 (V)	
Pixel Size	2.2 (μm) × 2.2 (μm)		2.4 (μm) × 2.4 (μm)		3.45 (µm) × 3.45 (µm))
Scan Type	Progressive		<u> </u>			
Shutter Method	Rolling shutter (Globa	I reset mode supported)		Global shutter	
Shutter Function	Electronic shutter; Shutter speeds can be 100 ms in multiples of		Electronic shutter; Shutter speeds can be set from 50 μs to 100 ms.		Electronic shutter; Shutter speeds can be set from 20 μs to 100 ms.	
Partial function	4 to 1944 lines (2-line	increments)	1848 to 3692 lines		4 to 2048 lines	
Frame rate (Image Acquisition Time *)	14 fps (71.7ms)		23.5 fps (42.6ms)		25.6 fps (38.2ms)	
Lens Mounting	C mount					
Field of vision, Installation distance	Selecting a lens accor	ding to the field of vision	n and installation dista	nce		
Ambient temperature range	Operating: 0 to +40°C Storage: -30 to 65°C (with no icing or condensation)		Operating: 0 to +40°C Storage: -20 to 65°C (with no icing or condensation)		Operating: 0 to +40°C Storage: -30 to 65°C (with no icing or condensation)	
Ambient humidity range	Operating: 35 to 85%l	RH, Storage: 35 to 85%	RH (with no condensa	tion)		
Weight	Approx. 52 g		Approx. 85 g			
Accessories	Instruction Sheet		Instruction Sheet, Ger	neral Compliance Infor	mation and Instructions	for EU

^{*} The image acquisition time does not include the image conversion processing time of the sensor controller.

Digital CCD Cameras

Model	FZ-S	FZ-SC	FZ-S2M	FZ-SC2M		
Image elements	Interline transfer reading all pixel CCD image elements (1/3-inch e		Interline transfer reading all pixels, CCD image elements (1/1.8-inch equivalent)			
Color/Monochrome	Monochrome	Color	Monochrome	Color		
Effective pixels	640 (H) × 480 (V)		1600 (H) × 1200 (V)			
Pixel size	7.4 (μm) × 7.4 (μm)		4.4 (μm) × 4.4 (μm)			
Shutter function	Electronic shutter; select shutter	ectronic shutter; select shutter speeds from 20 μs to 100 ms				
Partial function	12 to 480 lines		12 to 1200 lines			
Frame rate (Image Acquisition Time *)	80 fps (12.5 ms)		30 fps (33.3 ms)			
Lens mounting	C mount					
Field of vision, installation distance	Selecting a lens according to the	field of vision and installation dista	ance			
Ambient temperature range	Operating: 0 to 50 °C Storage: -25 to 65 °C (with no icing or condensation)		Operating: 0 to 40 °C Storage: -25 to 65 °C (with no icing or condensation)			
Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)					
Weight	Approx. 55 g		Approx. 76 g			
Accessories	Instruction manual					

^{*} The image acquisition time does not include the image conversion processing time of the sensor controller.

Small CCD Digital Cameras

Model	FZ-SF	FZ-SFC	FZ-SP	FZ-SPC			
Image elements	Interline transfer reading all pixel	terline transfer reading all pixels, CCD image elements (1/3-inch equivalent)					
Color/Monochrome	Monochrome	Color	Monochrome	Color			
Effective pixels	640 (H) × 480 (V)						
Pixel size	7.4 (μm) × 7.4 (μm)						
Shutter function	Electronic shutter; select shutter	speeds from 20 µm to 100 ms					
Partial function	12 to 480 lines	2 to 480 lines					
Frame rate (Image Acquisition Time *)	80 fps (12.5ms)						
Lens mounting	Special mount (M10.5 P0.5)	Special mount (M10.5 P0.5)					
Field of vision, installation distance	Selecting a lens according to the	Selecting a lens according to the field of vision and installation distance					
Ambient temperature range	Operating: 0 to 50 °C (camera amp) 0 to 45 °C (camera head) Storage: -25 to 65 °C (with no icing or condensation)						
Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)						
Weight	Approx. 150 g						
Accessories	instruction manual, installation bracket, four mounting brackets (M2)						

^{*} The image acquisition time does not include the image conversion processing time of the sensor controller.


FH-Series

Intelligent Compact Digital CMOS Cameras


Model	FZ-SQ010F	FZ-SQ050F	FZ-SQ100F	FZ-SQ100N			
Image elements	CMOS color image elements (1	MOS color image elements (1/3-inch equivalent)					
Color/Monochrome	Color	olor					
Effective pixels	752 (H) × 480 (V)						
Pixel size	6.0 (μm) × 6.0 (μm)						
Shutter function	1/250 to 1/32,258						
Partial function	8 to 480 lines	3 to 480 lines					
Frame rate (Image Acquisition Time *1)	60 fps (16.7 ms)						
Field of vision	7.5 × 4.7 to 13 × 8.2 mm	13 × 8.2 to 53 × 33 mm	53 × 33 to 240 × 153 mm	29 × 18 to 300 × 191 mm			
Installation distance	38 to 60 mm	56 to 215 mm	220 to 970 mm	32 to 380 mm			
LED class *2	Risk Group2		•	•			
Ambient temperature range	Operating: 0 to 50 °C Storage: -25 to 65 °C						
Ambient humidity range	Operating and storage: 35% to	Operating and storage: 35% to 85% (with no condensation)					
Weight	Approx. 150 g	pprox. 150 g Approx. 140 g					
Accessories	Mounting bracket (FQ-XL), pola	rizing filter attachment (FQ-XF	1), instruction manual and warning	label			

The image acquisition time does not include the image conversion processing time of the sensor controller. Applicable standards: IEC62471-2


Narrow View FZ-SQ010F




• Wide View (Long-distance) FZ-SQ100F



• Standard FZ-SQ050F



• Wide View (Short-distance) FZ-SQ100N



Ratings and Specifications (Cable, Monitor)

Camera Cables

Model	FZ-VS3 (5 m)	FZ- VSB3 (5 m)	FZ- VSBX (5 m)	FZ- VSL3 (5 m)	FZ- VSLB3 (5 m)
Туре	Stan- dard	Bend resistant	Super- bend- resistant	Right- angle	Bend resistant Right-angle
Shock resistiveness (durability)	10 to 150 Hz single amplitude 0.15 mm 3 directions, 8 strokes, 4 times				
Ambient temperature range		n and stora			_
Ambient humidity range	Operation and storage: 40 to 70%RH (with no condensation)				_
Ambient atmosphere	No corros	sive gases	i		
Material	Cable sheath, connector: PVC				
Minimum bending radius	69mm	69mm	69mm	69mm	69mm
Weight	Approx. 390 g	Approx. 430 g	Approx. 460 g	Approx. 390 g	Approx. 430 g

Cable Extension Unit

Model	FZ-VSJ
Power supply voltage *1	11.5 to 13.5 VDC
Current consumption *2	1.5 A max.
Ambient temperature range	Operating: 0 to 50 °C; Storage: -25 to 65 °C (with no icing or condensation)
Ambient humidity range	Operating and storage: 35 to 85% (with no condensation)
Weight	Approx. 240 g
Accessories	Instruction Sheet and 4 mounting screws

^{*1} A 12-VDC power supply must be provided to the Cable Extension Unit when connecting the Intelligent Compact Camera, or the Lighting Controller.

Lighting Controller. *2 The current consumption shows when connecting the Cable Extension Unit to an external power supply.

Long-distance Camera Cables

Model	FZ-VS4 (15 m)	FZ-VSL4 (15 m)		
Туре	Standard	Right-angle		
Shock resistiveness (durability)	10 to 150 Hz single amplitude 0.15 mm 3 directions, 8 strokes, 4 times			
Ambient temperature range	Operation and storage: 0 to 65 °C (with no icing or condensation)			
Ambient humidity range	Operation and storage: 40 to 70%RH (with no condensation)			
Ambient atmosphere	No corrosive gases			
Material	Cable sheath, connector	or: PVC		
Minimum bending radius	78 mm			
Weight	Approx. 1400 g			

Encoder Cable

Model	FH-VR
Vibration resistiveness	10 to 150 Hz single amplitude 0.1 mm 3 directions, 8 strokes, 10 times
Ambient temperature range	Operation: 0 to 50 °C; Storage: -10 to 60 °C (with no icing or condensation)
Ambient humidity range	Operation and storage: 35 to 85%RH (with no condensation)
Ambient atmosphere	No corrosive gases
Material	Cable Jacket: Heat, oil and flame resistant PVC Connector: polycarbonate resin
Minimum bending radius	65 mm
Weight	Approx. 104 g

Touch Panel Monitor

Model		FH-MT12
	Display area	12.1 inch
	Resolution	1024 (V) × 768 (H)
	Number of color	16,200,000 colors (8 bit/color)
	Brightness	500cd/m ² (Typ)
Major Function	Contrast Ratio	700:1 (Typ)
major i unction	Viewing angle	Horizontal (left and right): -80° to 80° (typ) Vertical (top and bottom): -70° to 70° (typ)
	Backlight Unit	LED, edge-light
	Backlight lifetime	About 80,000 hour
	Touch panel	4wire resistive touch screen
	Video input	analog RGB
External interface	Touch panel signal	USB
	Todon paner signar	RS-232C
	Power supply voltage	24 VDC (21.6 to 26.4 VDC)
Ratings	Current consumption	0.5A
	Insulation resistance	Between DC power supply and Touch Panel Monitor FG: 20 M Ω or higher (rated voltage 250 V)
	Ambient temperature range	Operating: 0 to 50°C, Storage: -20 to +65°C (with no icing or condensation)
	Ambient humidity range	Operating and Storage: 20 to 90 %RH (with no icing or condensation)
Operating	Ambient environment	No corrosive gas
environment	Vibration resistance	10 to 150 Hz, one-side amplitude 0.1 mm (Max. acceleration 15 m/s²) 10 times for 8 minutes for each three direction
	Degree of protection	Panel mounting: IP65 on the front
Operation		Touch pen
Mounting		Panel mounting, VESA mounting
Structure	Weight	Approx.2.6 kg
	Material	Front panel: PC/PBT, Front Sheet: PET, Rear case: SUS
N 4 FILO : 0	0 1 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	· · · · ·

Note: FH Series Sensor Controllers version 5.32 or higher is required.

Monitor Cables

Model	FH-VMDA (2 m)	FH-VUAB (2 m)	XW2Z-200PP-1 (2 m)			
Cable type	DVI-Analog Conversion Cable	USB Cable	RS-232C Cable			
Vibration resistance	10 to 150 Hz, one-side amplitude 0.1 mm,	10 to 150 Hz, one-side amplitude 0.1 mm, 10 times for 8 minutes for each three direction				
Ambient Temperature	Operating Condition: 0 to 50°C, Storage C	Operating Condition: 0 to 50°C, Storage Condition: -10 to 60°C (with no icing or condensation)				
Ambient Humidity	Operating Condition: 35 to 85%RH, Storage	Operating Condition: 35 to 85%RH, Storage Condition: 35 to 85%RH (with no icing or condensation)				
Ambient environment	No corrosive gases					
Material	Cable outer sheath, Connector: PVC	Cable outer sheath, Connector: PVC Cable outer sheath, Connector: PVC Connector: ABS/Ni Plating				
Minimum bend radius	36 mm	25 mm	59 mm			
Weight	Approx.220 g	Approx.75 g	Approx.162 g			

LCD Monitor

Model	FZ-M08
Size	8.4 inches
Туре	Liquid crystal color TFT
Resolution	1,024 × 768 dots
Input signal	Analog RGB video input, 1 channel
Power supply voltage	21.6 to 26.4 VDC
Current consumption	Approx. 0.7 A max.
Ambient temperature range	Operating: 0 to 50 °C; Storage: -25 to 65 °C (with no icing or condensation)
Ambient humidity range	Operating and storage: 35 to 85% (with no condensation)
Weight	Approx. 1.2 kg
Accessories	Instruction Sheet and 4 mounting brackets

EtherCAT Communications Specifications

Item		Specifications
Communications standard		IEC61158 Type 12
Physical layer		100 BASE-TX (IEEE802.3)
Modulation		Base band
Baud rate		100 Mbps
Topology		Depends on the specifications of the EtherCAT master.
Transmission Media		Twisted-pair cable of category 5 or higher (double-shielded straight cable with aluminum tape and braiding)
Transmission Distance		Distance between nodes: 100 m or less
Node address setting		00 to 99
External connection terminals		RJ45 × 2 (shielded) IN: EtherCAT input data, OUT: EtherCAT output data
Send/receive PDO data sizes	Input	56 to 280 bytes/line (including input data, status, and unused areas) Up to 8 lines can be set. *
	Output	28 bytes/line (including output data and unused areas) Up to 8 lines can be set. *
Mailbox data size	Input	512 bytes
	Output	512 bytes
Mailbox		Emergency messages, SDO requests, and SDO information
Refreshing methods		I/O-synchronized refreshing (DC)

^{*} This depends on the upper limit of the master.


Version Information

FH Series and Programming Devices
Use the latest version of Sysmac Studio Standard Edition/Vision Edition.

FH Series	Version of FH Series	Corresponding version of Sysmac Studio Standard Edition/Vision Edition
FH-5551 (-□) FH-5051 (-□) FH-2051 (-□)	Version 6.51 or higher	Supported by version 1.53 or higher.
	Version 6.40	Supported by version 1.43 or higher.
	Version 6.31	Supported by version 1.30 or higher.
	Version 6.21	Supported by version 1.26 or higher.
	Version 6.11	Supported by version 1.25 or higher.
	Version 5.72	Supported by version 1.18 or higher.
	Version 5.71	Supported by version 1.18 or higher.
	Version 5.60	Supported by version 1.15 or higher.
	Version 5.50	Supported by version 1.14.89 or higher.
	Version 5.30	Supported by version 1.10.80 or higher.
	Version 5.20	Supported by version 1.10 or higher.
	Version 5.10	Supported by version 1.07.43 or higher.
	Version 5.00	Supported by version 1.07 or higher. Not supported by version 1.06 or lower.

Components and Functions

Sensor Controllers High-speed, Large-capacity Controller Standard Controller (4-camera type)

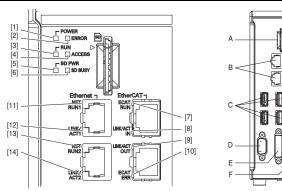



	Name	Description
[1]	POWER LED	Lit while power is ON.
[2]	ERROR LED	Lit when an error has occurred.
[3]	RUN LED	Lit while the layout turned on output setting is displayed.
[4]	ACCESS LED	Blinks while the internal nonvolatile memory is accessed.
[5]	SD POWER LED	Blinks while power is supplied to the SD memory card and the card is usable.
[6]	SD BUSY LED	Blinks while the SD memory card is accessed.
[7]	EtherCAT RUN LED	Lit while EtherCAT communications are usable.
[8]	EtherCAT LINK/ACT IN LED	Lit when connected with an EtherCAT device, and blinks while performing communications.
[9]	EtherCAT LINK/ACT OUT LED	Lit when connected with an EtherCAT device, and blinks while performing communications.
[10]	EtherCAT ERR LED	Lit when EtherCAT communications have become abnormal.
[11]	EtherNet NET RUN1 LED	Lit while EtherNet communications are usable.
[12]	EtherNet LINK/ACK1 LED	Lit when connected with an EtherNet device, and blinks while performing communications.
[13]	EtherNet NET RUN2 LED	Lit when EtherNet communications are usable.
[14]	EtherNet LINK/ACK2 LED	Lit when connected with an EtherNet device, and blinks while performing communications.

	Name	Description
Α	SD memory card installation connector	Install the SD memory card. Do not plug or unplug the SD memory card during measurement operation. Otherwise measurement time may be affected or data may be destroyed.
		Connect an EtherNet device.
		FH-2051 Series/FH-5□51 Series
В	EtherNet connector	Upper port: Ethernet port Lower port: Ethernet port, EtherNet/IP port, and PROFINET port are sharing use.
С	USB connector	Connect a USB device. Do not plug or unplug it during measurement operation. Otherwise measurement time may be affected or data may be destroyed.
D	RS-232C connector	Connect an external device such as a programmable controller.
E	DVI-I connector	Connect a monitor.
F	I/O connector (control lines, data lines)	Connect the controller to external devices such as a sync sensor and PLC.
G	EtherCAT address setup volume	Used to set a node address (00 to 99) as an EtherCAT communication device.
Н	EtherCAT communication connector (IN)	Connect the opposed EtherCAT device.
- 1	EtherCAT communication connector (OUT)	Connect the opposed EtherCAT device.
J	Encoder connector	Connect an encoder.
K	Camera connector	Connect cameras.
L	Power supply terminal connector	Connect a DC power supply. Wire the controller independently on other devices. Wire * the ground line. Be sure to ground the controller alone.

^{*} Use the attachment power terminal connector (male) of FH-XCN series.
For details, refer to 5-3 Sensor Controller Installation on Vision System FH series Hardware Setup Manual (Z366).

Lite Controllers (4-camera type)

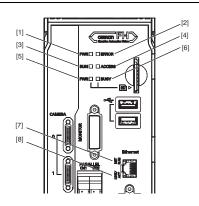

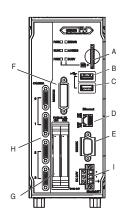

	LED name	Description
[1]	PWR LED	Lit while power is ON.
[2]	ERROR LED	Lit when an error has occurred.
[3]	RUN LED	Lit while the layout turned on output setting is displayed.
[4]	ACCESS LED	Blinks while the internal nonvolatile memory is accessed.
[5]	SD PWR LED	Lit while power is supplied to the SD memory card and the card is usable.
[6]	SD BUSY LED	Lit when access to the SD memory card.
[7]	Ethernet NET RUN LED	Lit while Ethernet communications are usable.
[8]	Ethernet LINK/ACT LED	Blinks when connected with an Ethernet device, and blinks while performing communications.

	Connector name	Description
Α	SD memory card installation connector	Install the SD memory card. Do not plug or unplug the SD memory card during measurement operation. Otherwise measurement time may be affected or data may be destroyed.
В	USB 2.0 connector	Connects to USB 2.0. Do not insert or remove during loading or writing of measurement or data. The measurement time can be longer or data can be damaged.
С	USB 3.0 connector	Connects to USB 3.0. Do not insert or remove during loading or writing of measurement or data. The measurement time can be longer or data can be damaged. USB 3.0 has a high ability to supply the bus power. Use the Sensor Controller by combining USB 3.0, faster transport can be realized.
D	Ethernet connector	Connect an Ethernet device. Ethernet port, EtherNet/IP port, and PROFINET port are sharing use.
Е	RS-232C connector	Connect an external device such as a programmable controller.
F	DVI-I connector	Connect a monitor.
G	Parallel connector (control lines, data lines)	Connect the controller to external devices such as a sync sensor.
Н	Camera connector	Connect a camera.
1	Power supply terminal connector	Connect a DC power supply. Wire the controller independently on other devices. Wire * the ground line. Be sure to ground the FH Sensor Controller alone.

^{*} Use the attachment power terminal connector (male) of FH-XCN-L series.
For details, refer to 5-3 Sensor Controller Installation on Vision System FH series Hardware Setup Manual(Z366).

Processing Items

Group	lcon		Processing Item	Corresponding Page in the Catalog
	à	Search	Used to identify the shapes and calculate the position of measurement objects.	
Î	600	Flexible Search	Recognizing the shapes of workpieces with variation and detecting their positions.	
·	清	Sensitive Search	Search a small difference by dividing the search model in detail, and calculating the correlation.	
·	-	ECM Search	Used to search the similar part of model form input image. Detect the evaluation value and position.	
·	\(\begin{array}{c} \\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ 	EC Circle Search	Extract circles using "round " shape information and get position, radius and quantity in high preciseness.	
	2	Shape Search II	Used to search the similar part of model from input image regardless of environmental changes. Detect the evaluation value and position.	
	ш ф <u>2</u> -2	Shape Search III	Robust detection of positions is possible at high-speed and with high precision incorporating environmental fluctuations, such as differences in individual shapes of the workpices, pose fluctuations, noise superimposition and shielding.	P12
·	-	EC Corner	This processing item measures a corner position (corner) of a workpiece.	
	*	Ec Cross	The center position of a crosshair shape is measured using the lines created by the edge information on each side of the crosshair.	
	a	Classification	Used when various kinds of products on the assembly line need to be sorted and identified.	
		Edge Position	Measure position of measurement objects according to the color change in measurement area.	
	###	Edge Pitch	Detect edges by color change in measure- ment area. Used for calculating number of pins of IC and connectors.	
	#	Scan Edge Position	Measure peak/bottom edge position of workpieces according to the color change in separated measurement area.	P12
	畫	Scan Edge Width	Measure max/min/average width of work- pieces according to the color change in separated measurement area.	
		Circular Scan Edge Position	Measure center axis, diameter and radius of circular workpieces.	P12
Measurement		Circular Scan Edge Width	Measure center axis, width and thickness of ring workpieces.	
		Intersection	Calculate approximate lines from the edge information on two sides of a square workpiece to measure the angle formed at the intersection of the two lines.	
	2	Color Data	Used for detecting presence and mixed varieties of products by using color average and deviation.	
		Gravity and Area	Used to measure area, center of gravity of workpices by extracting the color to be measured.	
		Labeling	Used to measure number, area and gravity of workpieces by extracting registered color.	
		Label Data	Selecting one region of extracted Label- ing, and get that measurement. Area and Gravity position can be got and judged.	
	M	Defect	Used for appearance measurement of plain-color measurement objects such as defects, stains and burrs.	
	M	Precise Defect	Check the defect on the object. Parameters for extraction defect can be set precisely.	
		Fine Matching	Difference can be detected by overlapping and comparing (matching) registered fine images with input images.	
	AB	Character Inspect	Recognize character according correlation search with model image registered in [Model Dictionary].	P15
	Date 08-02-1	Date Verification	Reading character string is verified with internal date.	
	A	Model Dictionary	Register character pattern as dictionary. The pattern is used in [Character Inspection].	
	DEE!	2DCode II *1	Recognize 2D code and display where the code quality is poor.	P15
		2DCode *2	Recognize 2D code and display where the code quality is poor.	
•		Barcode *3	Recognize barcode, verify and output decoded characters.	
İ	OCR	OCR	Recognize and read characters in images as character information.	P15
	OCR	OCR User Dictionary	Register dictionary data to use for OCR.	
		Dictionally	Used for calculating angle of inclination of	

Camera Image Input FH	Group	Icon		Processing Item	Page in the Catalog
Af FineMatching value and effects the difference between the input image and the non-defective produces and detects only defects. Camera Image Input FIH Image In conditions to input images from cameras. And set up the production of input images from cameras, and set up the production of input images from cameras. And set up the production of input images from cameras and set up the production of input images from cameras. And set up the production of input images with different congruence of the production of input images with different congruence of input input images input from congruence of input images. Input images at user-defined timings and executes parallel measurement. Not input images at user-defined timings and executes parallel measurement for each image. Insert the Multi-rigger imaging processing item congruence in put images. Position Compensation Defendence of the top of the flow. Position Compensation Defendence of the congruence of the put images and executes parallel measurement for each image and executes parallel measurement for order to make them easier to be measured. Position Support in the put images of the put images in the put images and ex				or for gaps or runoffs along the coating	
Camera Image Input First Camera Image Input First Camera Image Input Horitage Camera Image Input Horitage Camera Image Input Horitage Inp	Measurement			uct images and detects the difference be- tween the input image and the non-defective image. Allows for variations in non-defective	P6
Camera Image pupil HDR		噢		the conditions to input images from camer-	
Input Image Input Image				quiring several images with different con-	P10
Input Image Stereo Image Injut					
Input Image Camera Switching again. To switch the images used for measure-ment Image Switching again. To switch the images used for measure-ment. Not input images from camera again. The Multi-trigger Imaging processing item captures multiple images at user-defined the image of the post of the flow. The Multi-trigger Imaging processing item captures multiple images at user-defined the images in the post of the flow. The Multi-trigger Imaging processing item captures multiple images at user-defined the images in the post of the flow. The Multi-trigger Imaging processing item captures multiple images at user-defined the images and executes parallel measure-image in the top of the processing item captures multiple images at user-defined the capture image in capture multiple images at user-defined the capture images of processing image by potential processing image by potential processing image by potential processing image.		""	Stereo Image	tion directions using a photometric stereo	
ment. Not input images from camera again. The Multi-rigger Imaging processing lem captures multiple image at user-defined trings and executes parallel measurement mage. Insert the Multi-trigger lmaging to the top of the flow. The Multi-rigger imaging processing item captures multiple images at user-defined trings and executes parallel measurement again. Position Position Position Compensation Compensation Filtering Background Suppression Background Suppression Cornect Filter Color Gray Filter Filtering Color Gray Filter Filter and Filtering Filtering Stract Color Filter and Filtering Fi	Input Image	D	Camera Switch	ment. Not input images from cameras	
Autit-trigger Imaging with the properties of the processing item to the pot of the flow the pot of the pot of the pot of the pot of the processing flem to the top of the processing which requires imaging for multiple times. Position				ment. Not input images from camera	
Multi-trigger Imaging Task Imag				captures multiple images at user-defined timings and executes parallel measure- ment for each image. Insert the Multi-trig-	P10
Filtering background Suppression in Justines Serven and remove gradual brightness change store to make them easier to be measured. Background Suppression To enhance contrast of images by extracting color in specified brightness. Track brightness change of entire screen and remove gradual brightness change such as uneven brightness change such as uneven brightness. Color Gray Filter Stract Color Filter or convert color image is converted into monochrome images to emphasize specific color. Extract Color Filter or convert color image is converted into monochrome images to emphasize specific color. Anti Color Shading To remove the irregular color/pattern by uniformizing max. 2 specified colors. Stripes Removal Filter II or remove the irregular color/pattern by uniformizing max. 2 specified colors. Remove the background pattern of vertical, horizontal and diagonal stripes. Polar Transformation Useful for OCR or pattern inspection printed on circle.				captures multiple images at user-defined timings and executes parallel measure- ment for each image. Insert this process- ing item to the top of the processing which	
Filtering cameras in order to make them easier to be measured. Background Suppression in color in specified brightness. Track brightness change of entire screen and remove gradual brightness change such as uneven brightness. Color Gray Filter Color Gray Filter Extract Color Filter Anti Color Shading To remove the irregular color/pattern by uniformizing max. 2 specified colors. Stripes Removal Filter II Trapezoidal portional stripes. Compensate image Polar Transformation Transformation Machine Simulator Machine Simulator Filter II Trapezoidal Correction Machine Simulator Advanced filter Advanced filter Advanced filter Advanced filter Al Scratch Detect Filter '5 Unit Macro Unit Calculation Macro Calculation Macro Calculation Line Regression Line Regression Line Regression Process Used for calculating regression circle from plural measurement coordinate. Line Regression Line Regression Line Regression Line Regression Line Regression Line Color Gray Filter Track brightness change of entire screen and remove gradual brightness. Track brightness change of entire screen and remove gradual brightness. Convert color image to color extracted image or binary image. Convert color image to color extracted image or binary image. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and selection pattern of vertical, horizontal and selection pattern of vertical, horizontal and reasurement and term of vertical, horizontal and selection pattern of vertical, hor		=		measurement is performed by correcting	
Brightness Correct Filter Brightness Correct Filter Color Gray Filter Color Gray Filter Color image is converted into monochrome images to emphasize specific color. Extract Color Filter Anti Color Shading Anti Color Stripes Removal Filter II Polar Transformation Filter II Polar Transformation Machine Simulator Advanced filter Advanced filter Advanced filter Advanced filter Al Scratch Detect Filter "5 Al Scratch Detect Filter "5 Unit Calculation Macro Calculation Calculation Calculation Line Regression Loor Cordinate use under the measurement plural measurement coordinate. Precise Polar Or repattern inspection printed on circle. Compensate image Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Rectify the image by polar transformation. Useful for OCR or pattern inspection printed in the stripes and the stripes. Rectify the image by polar transformation. Useful for OCR or pattern inspection printed in the stripes. Rectify the image and measurement image are compared and only the different pixels are extracted and converted to an image. Process the images acquired from camerasin order to make them easier to measurement image are compared and only the different pixels are extracted and converted to an image. Process the images acquired from camerasin		M	Filtering	cameras in order to make them easier to	
Compensate image Polar Transformation Wachine Simulator Subtraction Advanced filter Advanced filter Advanced filter Advanced filter Advanced filter Advanced filter Al Scratch Detect Filter *5 Line Regression Line Regression Line Regression Line Regression Line Regression Loor Convert color image to color extracted images to emphasize specific color. Coorwert color image is converted into monochrome images to emphasize specific color. Coorwert color image to color extracted image or binary image. Cormount age or binary image. Remove the background pattern of vertical, horizontal and diagonal stripes. Rectify the image by polar transformation. Useful for OCR or pattern inspection printed on circle. Rectify the trapezoidal deformed image. How the alignment marks would move on the image when each stage or robot axis is controlled can be checked. The registered model image and measurement image are compared and only the different pixels are extracted and converted to an image. Process the images acquired from cameras in order to make them easier to measure. This processing item consolidates existing image conversion filtering into one processing item and adds extra functions. Combine multiple image to create one big image. Unit Macro Unit Macro Line Regression Used when using the judge results and measured values of Proctlem which are registered in processing item. Line Regression Used for calculating regression line from plural measurement coordinate. Line Regression under for calculating regression circle from plural measurement coordinate.					
Extract Color Filter images to emphasize specific color. Extract Color Filter age or binary image. Anti Color Shading by niformizing max.2 specified colors. Stripes Removal Filter II Stripes. Stripes Removal Filter II Stripes. Polar Transformation Rectify the image by polar transformation. Useful for OCR or pattern inspection printed on circle. Machine Simulator How the alignment marks would move on the image when each stage or robot axis is controlled can be checked. The registered model image and measurement image are compared and only the different pixels are extracted and converted to an image. Process the images acquired from cameras in order to make them easier to measure. This processing item consolidates existing image conversion filtering into one processing item and adds extra functions. Al Scratch Detect Filter *5 Extracts defects in the set measurement area. Unit Calculation Macro Unit Macro Calculation Extracts defects in the set measurement area. Unit Calculation Macro be easily incorporated into workflow as Unit Macro processing item. Used when using the judge results and measured values of Proctlem which are registered in processing item. Used or calculating regression line from plural measurement coordinate. Extracts clearly and the set value using an original calculation formula or change the set value or system data of a processing item.				screen and remove gradual brightness	
Filter age or binary image. Anti Color Shading by uniformizing max.2 specified colors. Stripes Removal Filter II Stripes Removal Filter II Stripes Removal Filter II Stripes Removal Filter II Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Remove the background pattern of vertical, horizontal and diagonal stripes. Rettify the image by polar transformation. Useful for OCR or pattern inspection printed on circle. How the alignment marks would move on the image when each stage or robot axis is controlled can be checked. The registered model image and measurement image are compared and only the different pixels are extracted and converted to an image. Panorama Process the images acquired from camerals in order to make them easier to measure. This processing item consolidates existing image conversion filtering into one processing item and adds extra functions. Combine multiple image to create one big image. Al Scratch Detect Filter *5 Unit Macro Unit Macro Unit Calculation Macro Calculation macro Calculation formula or change the set value or system data of a processing item. This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item. Line Regression Used when using the judge results and measured values of Proctlem which are registered in processing uints. Used for calculating regression line from plural measurement coordinate. Line Regression plural measurement coordinate.			Color Gray Filter		
Shading by uniformizing max.2 specified colors. Remove the background pattern of vertical, horizontal and diagonal stripes. Rectify the image by polar transformation. Useful for OCR or pattern inspection printed on circle. Rectify the trapezoidal deformed image. Rectify the trapezoidal can be deformed image. Process the image sac current on emage are compared and only the different pixels are extracted and converted to an image. Process the image sac current image are compared and only the different pixels are extracted and converted to an image. Process the image sacquired from cameras in order to make them easier to measurement as in order to make them easier to measurement as in order to make them easier to measurement in order to make them easier to measurement in order to make them easier to m					
Compensate image Polar Transformation Trapezoidal Correction Machine Simulator Machine Simulator Machine Subtraction Machine Subtraction Polar Trapezoidal Correction Machine Simulator Machine Simulation Swoulation Swoulation Swoulation Swoulation Swoulation Simulator Machine Simulator Machine Simulator Machine Simulation Swoulation Swoulation Swoulation Swoulator Machine Simulator Machine Simulator Machine Simulator Machine Simulator Machine Swoulation Swoulation Swoulator Machine Swoulation Swoulation Swoulation Swoulation Swoulation Swoul					
Transformation Transformation Transformation Trapezoidal Correction Machine Simulator Machine Simulator How the alignment marks would move on the image when each stage or robot axis is controlled can be checked. The registered model image and only the different pixels are extracted and converted to an image. Process the images acquired from cameras in order to make them easier to measure. This processing item consolidates existing image conversion filtering into one processing item and adds extra functions. Combine multiple image to create one big image. Al Scratch Detect Filter *5 Unit Macro Unit Macro Unit Calculation Macro Calculation Calculation Calculation Calculation Used when using the judge results and measurement are gistered in processing item. Used for calculating regression line from plural measurement coordinate. Extracts defects in the set measurement area. Advanced arithmetic processing can be easily incorporated into workflow as Unit Macro processing items. This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item. Used when using the judge results and measured values of Proctlem which are registered in processing units. Used for calculating regression line from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate.	Compensate			vertical, horizontal and diagonal	
Machine Simulator	image	ABC		Useful for OCR or pattern inspection print-	
the image when each stage or robot axis is controlled can be checked. The registered model image and measurement image are compared and only the different pixels are extracted and converted to an image. Process the images acquired from cameras in order to make them easier to measurement image conversion filtering into one processing item and adds extra functions. Panorama Combine multiple image to create one big image. Extracts defects in the set measurement area. Advanced arithmetic processing can be easily incorporated into workflow as Unit Macro processing items. Unit Calculation Macro advanced arithmetic processing tems. This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item. Used when using the judge results and measured values of Proclem which are registered in processing item. Used for calculating regression line from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Precise Used for calibration corresponding to trape-					
Image Subtraction Image are compared and only the different pixels are extracted and converted to an image. Process the images acquired from cameras in order to make them easier to measurement image conversion filtering into one processing item and adds extra functions. Panorama Panorama Combine multiple image to create one big image. Extracts defects in the set measurement area. Advanced arithmetic processing can be easily incorporated into workflow as Unit Macro processing items. Unit Calculation Macro processing items. This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item. Support measurement Calculation Line Regression Line Regression Used for calculating regression line from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate.		-		the image when each stage or robot axis is	
as in order to make them easier to measurement and adds extra functions. Panorama Panorama Combine multiple image to create one big image. Al Scratch Detect Filter *5 Unit Macro Unit Macro Unit Calculation Macro Calculation Calculation Calculation Calculation Used when using the judge results and measured values of Proctem which are registered in processing tiems. Used for calculating regression line from plural measurement coordinate. Line Regression Lise Precise Used for calculating corresponding to trape-				measurement image are compared and only the different pixels are	
Al Scratch Detect Filter *5 Unit Macro Unit Calculation Macro Calculation Calculation Line Regression			Advanced filter	as in order to make them easier to mea- sure. This processing item consolidates existing image conversion filtering into one	
Unit Macro Unit Macro Unit Macro Unit Calculation Final Support Macro Calculation Used When using the judge results and measured values of Procitem which are registered in processing units. Used for calculating regression line from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate.			Panorama		
Unit Macro easily incorporated into workflow as Unit Macro processing items. This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item. Support Calculation Used when using the judge results and measured values of Procitem which are registered in processing units. Line Regression Used for calculating regression line from plural measurement coordinate. Used for calculating regression circle from Regression plural measurement coordinate. Precise Used for calibration corresponding to trape-					P4
Unit Calculation wants to calculate a value using an original calculation formula or change the set value or system data of a processing item. Support Calculation Used when using the judge results and measured values of Proclem which are registered in processing units. Line Regression Used for calculating regression line from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate. Used for calculating regression circle from plural measurement coordinate.		O	Unit Macro	easily incorporated into workflow as Unit	
Calculation measured values of Procitem which are registered in processing units. Line Regression Used for calculating regression line from plural measurement coordinate. Circle Circle Regression plural measurement coordinate. Line Regression Used for calculating regression circle from plural measurement coordinate. Line Regression Used for calibration corresponding to trape-		*		wants to calculate a value using an original calculation formula or change the set val-	
Used for calculating regression Divided from Planta Used for calculating regression circle from Regression Divided from Planta Divided from Plan			Calculation	measured values of Procitem which are	
Regression plural measurement coordinate. Precise Used for calibration corresponding to trape-		+	Line Regression		
		O			
Zoldal distortion and lens distortion.			Precise Calibration	Used for calibration corresponding to trapezoidal distortion and lens distortion.	

Group	Icon		Processing Item	Corresponding Page in the Catalog
	User	User Data	Used for setting of the data that can be used as common constants and variables in scene group data.	
		Set Unit Data	Used to change the ProcItem data (setting parameters, etc.) that has been set up in a scene.	
		Get Unit Data	Used to get one data (measured results, setting parameters, etc.) of ProcItem that has been set up in a scene.	
		Set Unit Figure	Used for re-setting the figure data (model, measurement area) registered in an unit.	
	-	Get Unit Figure	Used for get the figure data (model, measurement area) registered in an unit.	
		Trend Monitor	Used for displaying the information about results on the monitor, facilitating to avoid NG and analyze causes.	
	= =	Image Logging	Used for saving the measurement images to the memory and USB memory.	
		Image Conversion Logging	Used for saving the measurement images in JPEG and BMP format.	
	E\$	Data Logging	Used for saving the measurement data to the memory and USB memory.	
	ఫ్రి	Elapsed Time	Used for calculating the elapsed time since the measurement trigger input.	
	Z	Wait	Processing is stopped only at the set time. The standby time is set by the unit of [ms].	
	2	Focus	Focus setting is supported.	
	100	Iris	Focus and aperture setting is supported.	
	1000	Parallelize	A part of the measurement flow is divided into two or more tasks and processed in parallel to shorten the measurement time. This processing item is placed at the top of processing to be performed in parallel.	
	1	Parallelize Task	A part of the measurement flow is divided into two or more tasks and processed in parallel to shorten the measurement time. This processing item is placed immediately before processing to be performed in parallel between Parallelize and Parallelize End.	
Support measure-		Statistics	Used when you need to calculate an average of multiple measurement results.	
ment	B+	Reference Calib Data	Calibration data and distortion compensa- tion data held under other processing items can be referenced.	
	X	Position Data Calculation	The specified position angle is calculated from the measured positions.	
	<u> </u>	Stage Data	Sets and stores data related to stages.	P13
	<u>-</u> 20	Robot Data	Sets and stores data related to robots.	
		Vision Master Calibration	This processing item automatically calculates the entire axis movement amount of the control equipment necessary for calibration.	
		PLC Master Calibration	Calibration data is created using a communication command from PLC.	
	از!	Convert Position Data	The position angle after the specified axis movement is calculated.	
	+/	Movement Single Position	The axis movement that is required to match the measured position angle to the reference position angle is calculated.	
	###/	Movement Multi Points	The axis movements that are required to match the measured position angles to the corresponding reference position angles are calculated.	
	+	Detection Point	Obtains position/angle information by re- ferring to the coordinate values measured with the Measurement Processing Unit.	
	+#	Manual Position Setting	Used to change the measurement coordinates X and Y of the measurement processing unit.	
	•	Camera Calibration	By setting the camera calibration, the measurement result can be converted and output as actual dimensions.	
	#	Data Save	The set data can be saved in the controller main unit or as scene data. The data is held even after the FH/FZ power is turned off.	
		Conveyor Calibration	Conveyor Calibration is used to calibrate camera, conveyor, and robots for conveyor tracking application.	
		Scene	The specified scene is copied to the current scene.	
	@	System Information	Obtain system information (e.g., memory and disk space and I/O input signal status) of the Sensor Controller.	

Group	Icon		Processing Item	Corresponding Page in the Catalog
	-	Conditional Branch	Used where more than two kinds of products on the production line need to detected separately.	
	# (O)	End	This ProcItem must be set up as the last processing unit of a branch.	
		DI Branch	Same as ProcItem "Branch". But you can change the targets of conditional branching via external inputs.	
	100	Control Flow Normal	Set the measurement flow processing into the wait state in which the specific no-pro- tocol command can be executed.	
	100	Control Flow PLC Link	Set the measurement flow processing into the wait state in which the specific PLC Link command can be executed.	
		Control Flow Parallel	Set the measurement flow processing into the wait state in which the specific parallel command can be executed.	
		Control Flow Fieldbus	Set the measurement flow processing into the wait state in which the specific Field- bus command can be executed.	
Dranah	SMITCH	Selective Branch	Easily branch to multiple destinations.	
Branch	h	Conditional Execution (If)	The measurement flow is divided according to the comparison result obtained using the set expressions and conditions.	
	h	Conditional Execution (Else)	Insert between the Conditional Execution (If) processing item and End If processing item. The measurement flow is divided according to the comparison result obtained using the set expressions and conditions.	
	C	Loop	The set processes are repeated until the loop count reaches the specified number, and then the next process starts.	
	ţ	Loop Suspension	Insert between the Loop processing item and End Loop processing item. Used to stop the loop before the loop count reaches the specified number.	
	Select Execution (Select) Select Execution flow is divided according to the conson result obtained using the conson result of the conson result	Used to set conditions. The measurement flow is divided according to the comparison result obtained using the conditions given by expressions.		
	th.	Select Execution (Case)	Used to make a judgment. The measure- ment flow is divided according to the com- parison result obtained using the conditions given by expressions.	
	21 32 33 41.4	Result Output (I/O)	Output data to the external devices such as a programmable controller or a PC via PLC Link, Parallel interface, Fieldbus interface (EtherCAT, EtherNet/IP (other than message communication), PROF-INET).	
	Result Output (Message) as a non-face catic save	Output data to the external devices such as a programmable controller or a PC with non-procedure mode via the serial interface or EtherNet/IP (message communication). This processing item allows you to save the logging data as a ".csv" file into the Sensor Controller as well.		
Output result		Data Output	Used when you need to output data to the external devices such as PLC or PC via serial ports.	
Parallel C Output	Parallel Data Output	Used when you need to output data to the external devices such as PLC or PC via parallel ports.		
		Used when you need to output judgement results to the external devices such as PLC or PC via parallel ports.		
		Fieldbus Data Output	Outputs data to an external device, such as a Programmable Controller, through a fieldbus interface.	
	ОК	Result Display	Used for displaying the texts or the figures in the camera image.	
		Display Image File	Display selected image file.	
Display result	NG	Display Last NG Image	Display the last NG images.	
		Conveyor Panorama Display	Display images of the tracking area as a panoramic image.	
		Display Image Hold	Processing item to retain images, including measurement results.	

^{*1 2}D Codes that can be read : Data Matrix (ECC200)
*2 2D Codes that can be read : Data Matrix (ECC200), QR Code
*3 Bar Codes that can be read : JAN/EAN/UPC (including add-on codes), Code 39, Codabar (NW-7), ITF (Interleaved 2 of 5), Code 93, Code 128, GS1-128, GS1 DataBar (RSS-14 / RSS Limited / RSS Expanded), Pharmacode
*4 Available on the following controllers:

FH-5□51/2051 Series (version 6.40 or later)
FH-L551-□□ (Use in conjunction with 0.3 or 0.4 million-pixel cameras.)


*5 Available on the FH-5□51-series Controller (version 6.40 or later). Optional FH-UMAI1 Scratch Detect Al Software Installer is required.


Dimensions (Unit: mm)

Sensor Controllers


High-speed, Large-capacity Controllers/Standard Controllers

FH-5551/-5551-10/-5551-20 FH-5051/-5051-10/-5051-20 FH-2051/-2051-10/-2051-20

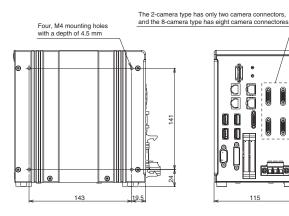


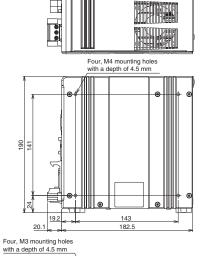







Lite Controllers FH-L551/-L551-10

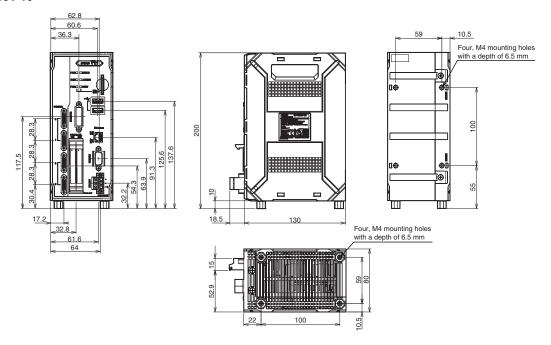


Cameras


High-speed Digital CMOS Camera/Digital CMOS Camera

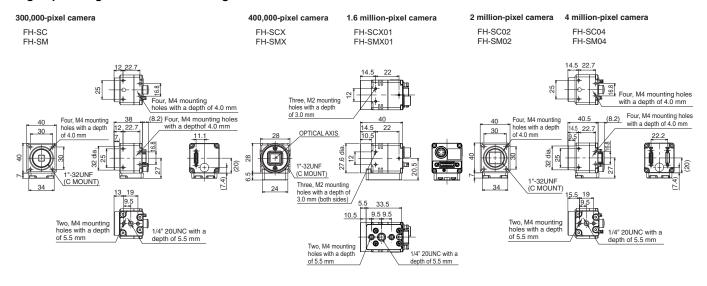

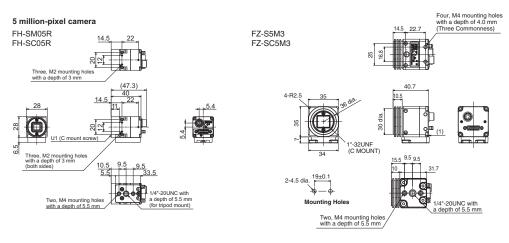

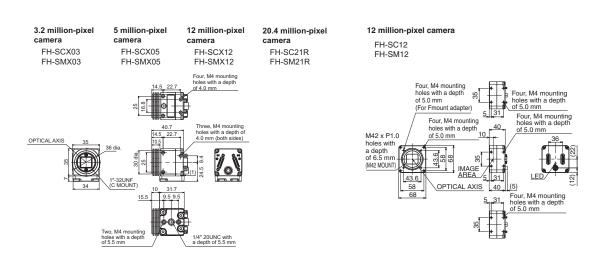


Digital CCD/CMOS Cameras

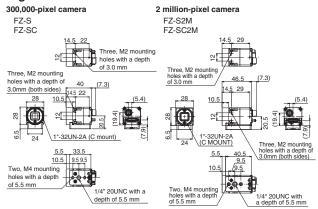

Small digital CCD cameras Camera head Camera amplifier Flat camera Can be used for both flat cameras and pen-shaped cameras Pen-shaped camera FZ-SP FZ-SPC FZ-SF FZ-SFC Two-4.3 dia Four, M1.7 mounting holes with a depth of 1.5 mm Three, M2 mounting holes with a depth of 3.0 mm 33 Eight, M1.7 mounting hole with a depth of 1.5 mm 16 pin round connector 12.7 9.6 7.5 20 pth of 3.0 mm Two, M3 mounting holes with a depth of 4 mm 12.5 dia. 1/4" 20UNC with a depth of 5.5 mm

Intelligent Compact Digital CMOS Cameras

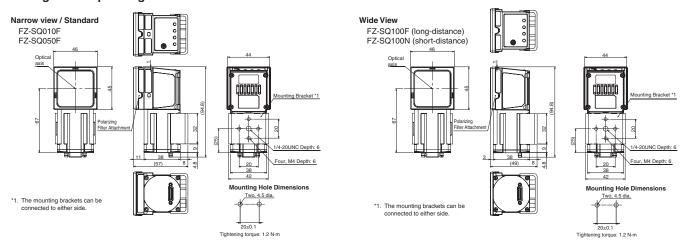

Cables

Camera Cable Camera Cable Bend resistant Camera Cable FZ-VS3 FZ-VSB3 (40) (100) (40) (100) (11) rectangular connector Super Bend resistant Camera Cable FZ-VSBX (42) (40) (25) (100) (40) (25) **I** • 26-pin rectangular connector Right-angle Camera Cable Bend resistant Right-angle Camera Cable FZ-VSL3 FZ-VSLB3 (30) L (*1) (100) (100) 26-pin 26-pin rectangular connecto rectangular connector æ Long-distance Camera Cable Long-distance Right-angle Camera Cable FZ-VS4 FZ-VSL4 (100) ₩ |• | 26-pin 26-pin rectangular connector *1. Cable is available in 2m/3m/5m/10m. *2. Each camera cables has polarity. Please ensure that the name plate side of the cable is connected to the controller. *3. Cable is available in 5m/10m. *4. Cable is available in 15m. (12)

Camera Cable Extension Unit FZ-VSJ


POWER LED

Extension Tubes for Small Camera

FZ-LESR 3 5 Extension tubes 5 mm Extension tubes 10 mm

Extension tubes 15 mn

Lens for Small Camera

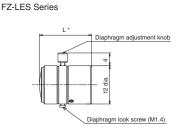


* Overall length is available in 16.4mm/19.7mm/23.1mm/25.5mm.

Encoder Cable


Camera Cable Con (Controller side)

Camera Cable Connector (Camera side)

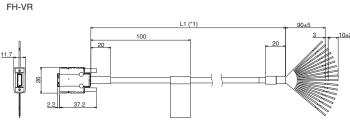


*1. Cable is available in 1.5 m.

Parallel I/O Cable

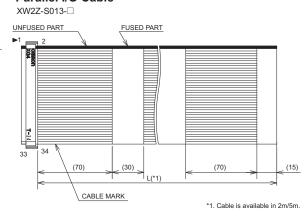


Touch Panel Monitor



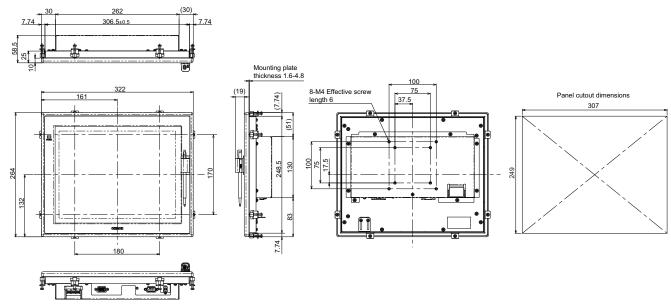


DVI-Analog Conversion Cable for Touch Panel Monitor/LCD Monitor

FH-VMDA




RS-232C Cable for Touch Panel Monitor

XW2Z-□□□PP-1




USB Cable for Touch Panel Monitor

FH-VUAB



LCD Monitor


FZ-M08

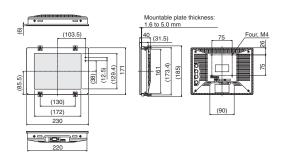

Optical Chart

Meaning of Optical Chart


The X axis of the optical chart shows the field of vision (mm) (*1), and the Y axis of the optical chart shows the camera installation distance (mm) (*2).

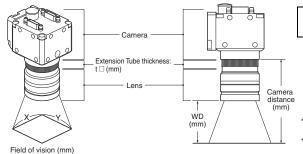



To select a lens, use the WEB Selector. https://www.fa.omron.co.jp/lens_en


- *1. The lengths of the fields of vision given in the optical charts are the lengths of the Y axis.
- *2. The vertical axis represents WD for small cameras.


Standard Lenses

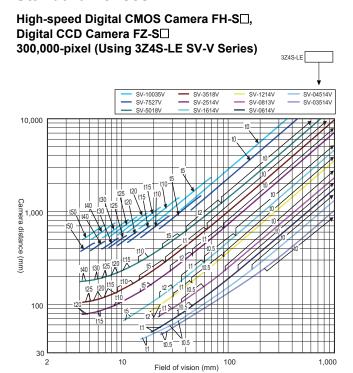


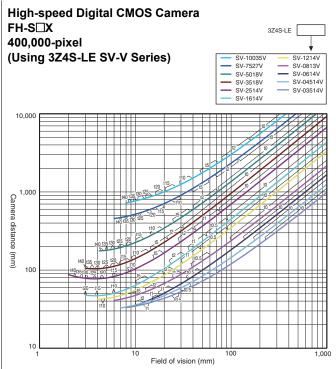

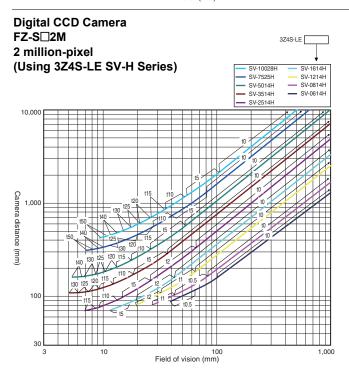

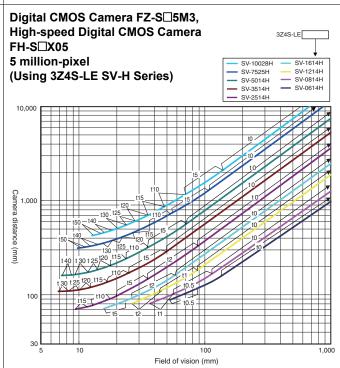


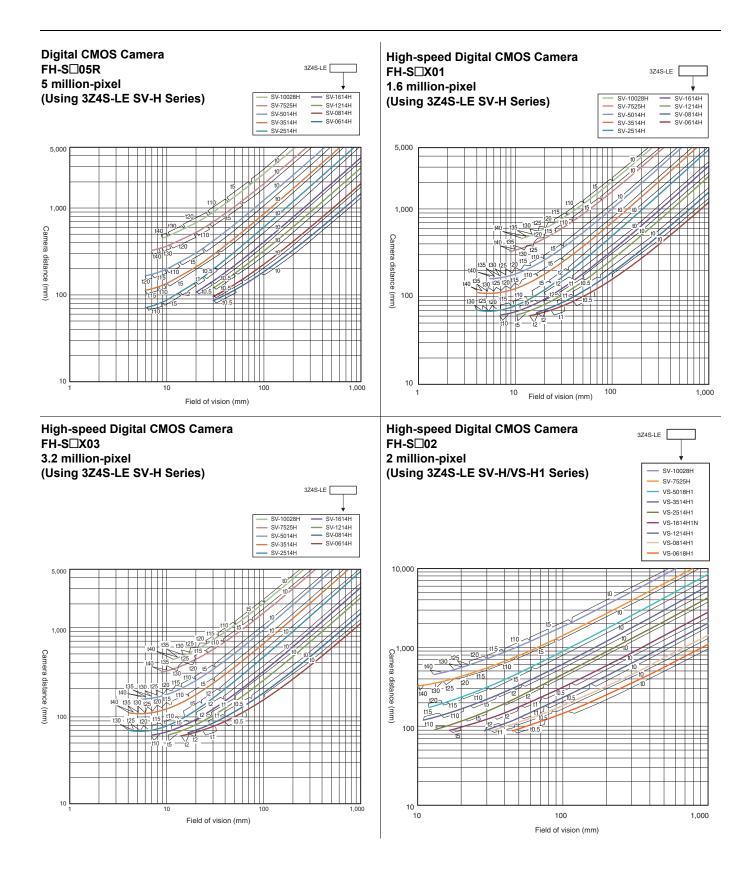

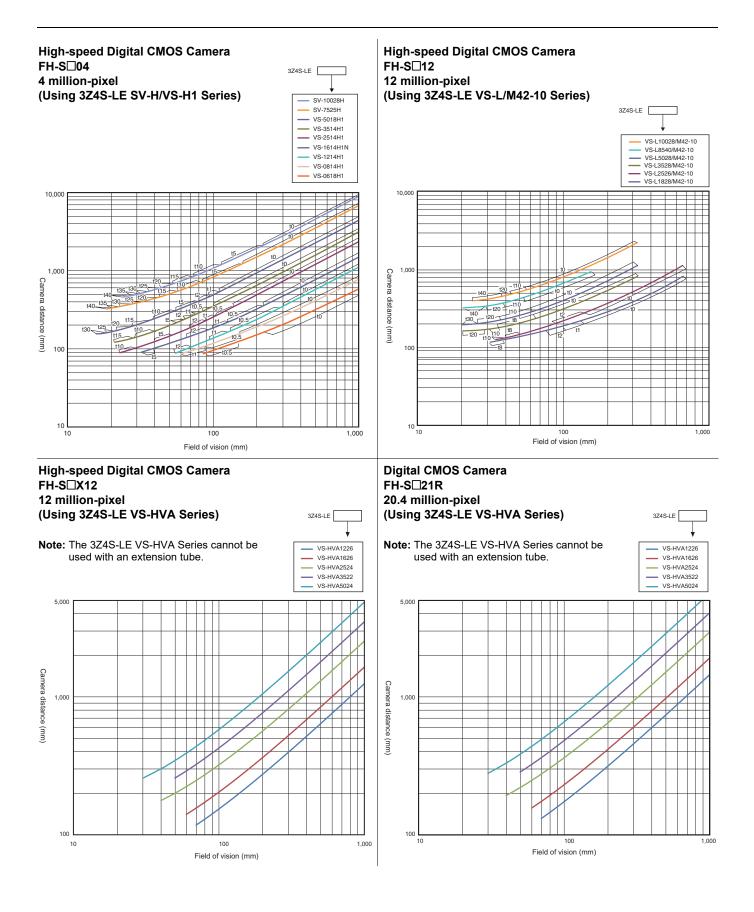


High-speed Digital CMOS Camera FH-S□X12 12 million-pixel (Using 3Z4S-LE VS-LLD Series)


Note: The 3Z4S-LE VS-LDD Series cannot be used with

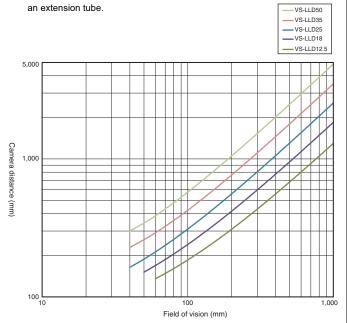

Digital CMOS Camera FH-S□21R 20.4 million-pixel (Using 3Z4S-LE VS-LLD Series)

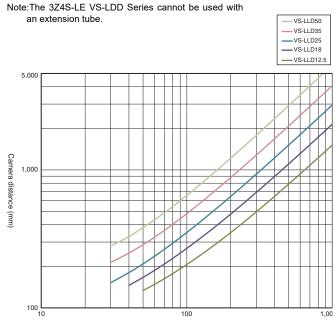

Field of vision (mm)

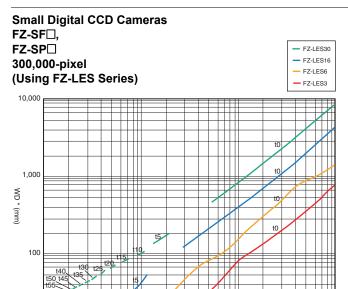

1,000

^{1 10} Field of vision (mm)
* The vertical axis represents WD, not installation distance.

Vibrations and Shocks Resistant Lenses High-speed Digital CMOS Camera High-speed Digital CMOS Camera FH-S□, FH-S□X **Digital CCD Camera** 400,000-pixel FZ-S□ 3Z4S-LE **High-speed Digital CMOS Camera** 300,000-pixel FH-S□X01 VS-MCA75 VS-MCA50 VS-MCA35 VS-MCA30 VS-MCA75 VS-MCA50 VS-MCA35 VS-MCA30 VS-MCA25 VS-MCA20 VS-MCA15 (Using 3Z4S-LE VS-MCA Series) 1.6 million-pixel (Using 3Z4S-LE VS-MCA Series) VS-MCA25 VS-MCA20 VS-MCA15 10,000 10.000 1,000 Camera distance (mm) 100 10 Field of vision (mm) Field of vision (mm) **Digital CCD Camera High-speed Digital CMOS Camera** FZ-S□2M FH-S□X03 2 million-pixel 3.2 million-pixel (Using 3Z4S-LE VS-MCA Series) (Using 3Z4S-LE VS-MCA Series) VS-MCA75 VS-MCA50 VS-MCA75 VS-MCA50 VS-MCA50 VS-MCA35 VS-MCA30 VS-MCA25 VS-MCA20 VS-MCA15 VS-MCA50 VS-MCA35 VS-MCA30 VS-MCA25 VS-MCA20 VS-MCA15 1,000 1,000 Camera distance (mm)


(mm)


1,000

Field of vision (mm)

1,000

Field of vision (mm)

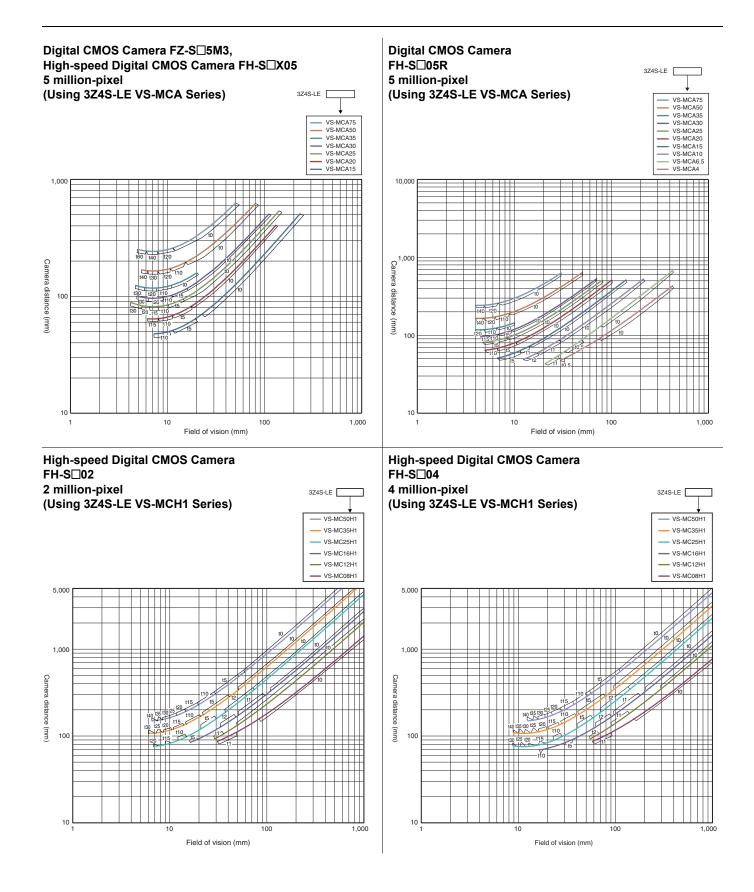

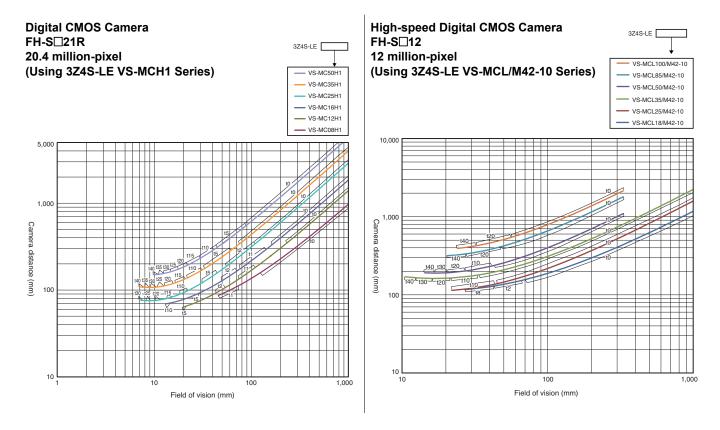

Related Manuals

Man.No.	Model number	Manual
Z365	FH/FHV7	Vision System FH/FHV7 Series User's Manual
Z341	FH/FHV7	Vision System FH/FHV7 series Processing Item Function Reference Manual
Z342	FH/FHV7	Vision System FH/FHV7 Series User's Manual for Communications Settings
Z343	FH/FHV7	Vision System FH/FHV7 Series Operation Manual for Sysmac Studio
Z366	FH Vision System FH series Hardware Setup Manual	
Z367 FH Vision System FH series Macro Customize Functions Programming I		Vision System FH series Macro Customize Functions Programming Manual
Z437	FH-UMAI	FH Application Software FH-UMAI Processing Item Function Reference Manual
Z438	FH-UMAI	FH Application Software FH-UMAI Version Update Tool Operating Manual

- Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products.
 Think&See is a trademark or registered trademark of OMRON Corporation in Japan and other countries.
 EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
 EtherNet/IP® is a trademark of ODVA.

- Microsoft® Visual Studio® and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- QR code is the registered trademark of DENSO WAVE.
- Intel and the Intel logo are trademarks of Intel Corporation in the U.S. and/or other countries.
- Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.
- The product photographs and figures that are used in this catalog may vary somewhat from the actual products.
 The SD Logo is a trademark of SD-3C LLC.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- The permission of Shutterstock.com was received for images that were used.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Note: Do not use this document to operate the Unit.

OMRON Corporation Industrial Automation Company

Kyoto, JAPAN Contact: www.ia.omron.com

Regional Headquarters

OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31) 2356-81-300 Fax: (31) 2356-81-388

OMRON ASIA PACIFIC PTE. LTD.

438B Alexandra Road, #08-01/02 Alexandra Technopark, Singapore 119968 Tel: (65) 6835-3011 Fax: (65) 6835-3011

OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-6023-0333 Fax: (86) 21-5037-2388

Authorized Distributor:

©OMRON Corporation 2018-2023 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM_26_3

Cat. No. Q197-E1-24 0623 (1118)